

Operation instructions

1. Insert batteries;
2. Put the tool measuring surface onto the object, press ON/OFF button to power on;
3. Press MODE button to switch for the desired modes(degrees, percent, IN/FT, mm/m);
4. Press HOLD button to hold the measured values;
5. Press REF button to set Zero;
6. Press the M button to remember the displayed angles(it can store 9 groups of values);
7. Press the MR button to recall the stored angles;
8. Press the Voice icon button to on/off the beeps;
9. Press the ON/OFF & CAL button to calibrate the accuracy;
- 10.

The measurement is completed, power off, remove the batteries, and keep the tool well.