

永電工業股份有限公司

432 台中縣大肚鄉沙田路 3 段 245 巷 83 號

TEL : 886 4 26992187 FAX : 886 4 26996248

Web site: www.heatact.com.tw E-mail: elecdeer@ms29.hinet.net

Use Instructions for Heating Vest



Care Your Body and Warm Your Heart

I. Product Functions:

1. The lining adopts the flexible, super conductive heating element with a good heating result, power-saving, curve-proof, fold-proof, long-lived and of high safety.
2. Temperature is automatically controlled at 45°C approximately.
3. The vest has the light material suitable for the uses of the male, female, old and young in mountaineering, fishing, traveling, going to work and going to school. It is convenient for all to use.

II. Specifications:

Model No. Of Heating Vest	Battery Used	Charger	Power Consumption
ED-141-1	1pc Lithium Battery 3.7V 3600mA	Input: 110V~240V Output: DC3.7V	2.1W
ED-141-2	4pcs Rechargeable Batteries 1.2V 2200mA	Input: 110V Output: DC3V	2W
ED-141-2	4pcs AA Alkaline Batteries 1.5V 2600mA	N/A	3.1W

1. Charging time for battery: 8 hours approximately
2. Vest dimensions: M, L, and XL

III. Operation Instructions:

1. Connect the battery pack with the connector of the vest heating element first.
2. Turn the switch of the battery pack to “ON” and, then, turn it to “OFF” when you don’t use the vest.
3. The graduations of the lithium battery are 0~9 in which “0” represents “turn off”, “1” the lowest temperature and “9” the highest temperature.
4. The lithium battery and rechargeable battery can be re-charged by a charger for repeated uses.

IV. Cautions:

1. Please charge the battery to the full first before each use to avoid the insufficient heat of a lower temperature.
2. ED-141-1 should use the lithium battery, which must not be replaced at will to avoid the excess high or excess low temperature.
3. ED-141-2 should use a rechargeable or AA alkaline battery. The AA alkaline battery will have a higher temperature so it must not be replaced with the other batteries at will to avoid the excess high or excess low temperature.
4. Wash by hands for cleaning and, then, suspend the vest after completing the cleaning for dripping dry. Do not wrench it dry, as it will make the vest distorted with deformation.
5. You can detach the heating element from this vest for cleaning. If it is necessary to clean the vest carefully, you can detach the heating element first and, then, clean the vest.

V. Simple Troubles Shooting:

Symptoms of Breakdown	Inspection and Solutions	Remarks
No heating	Check if the power plug of the vest is securely plugged in.	If you confirm or cannot determine if they are the causes of the breakdown, please contact the dealer or this company for handling.
Insufficient heat	1. Check if this kind of the battery is correct 2. Check if the battery is electrified. 3. Is the rechargeable battery charged to the full? 4. Is the scale of the lithium battery adjusted precisely?	

VI. Product Warranty

Warranty Card

Customer Name		Dealer’s Stamp
Product Name	Heating Vest	It will be invalid without the stamp of this company or the dealer.
Model No.		
Purchase Date	Y. M. D	
Dealer		
Address Of Dealer		
Phone No. Of Dealer		

1. You will have the free service within one year from the purchase date by this Warranty Card.
2. The warranty will not be covered under the following conditions: (charge as per the price)
 - a. The warranty period expires.
 - b. The Warranty Card is not presented.
 - c. The contents of this Warranty Card are altered or not correspondent with the existing article.
 - d. The product is modified or taken apart for repair by oneself without the approval of this company.
 - e. This Warranty Card must be stamped with the purchase date. In case of no warranty stamp, the Warranty shall be deemed void.