# 永電工業股份有限公司

432 台中縣大肚鄉沙田路 3 段 245 巷 83 號

TEL: 886 4 26992187 FAX: 886 4 26996248

Web site: www.heatact.com.tw E-mail: elecdeer@ms29.hinet.net

# **Use Instructions for Milk Bottle Warmer**





### **I. Product Features:**

Easy to operate, portable, space-saving

#### **II. Functions**

The  $60^{\circ}$ C constant temperature device maintains milk around  $60^{\circ}$ C, convenient for babies to suck anytime.

### **III. Specifications:**

- 1. Power Rating: 110V or DC 12V (These two different specifications must not be interchangeably used each other.)
- 2. Power Consumption: 10W
- 3. Dimensions: \psi 115\times 115\times \psi 63\text{mm (O.D.\times H.\times I.D.)}
- 4. Material: The outer casing is the foodstuff grade of PC plastic and heat radiating surface is stainless steel, safe and hygienic.

# **IV. Operation Instructions:**

- 1. Insert the plug into the 110V or DC 12V power source. (Our company has two different specifications. Please connect as per the specified specification of the product and do not connect the wrong power source.)
- 2. Place the milk bottle loaded with a right amount of boiling water or milk (hot or cold) on the warmer for keeping warm.
- 3. Start to heat up and, then, maintain it around 60  $^{\circ}$ C.

# **V. Safety Precautions:**

- 1. After locating the milk bottle in the warmer, connect the power cord with it. After using, be sure to unplug from the outlet to avoid the idle running.
- 2. The mixed milk must be sucked up within one hour when warmed to prevent the degeneration.
- 3. In case the product is wetted carelessly, blow it dry by a hairdryer first and, then, use.
- 4. Wipe the warmer saucer with a wet cloth for cleaning. Do not place the whole milk bottle into water.
- 5. In the event of any damage, stop using and send it back to the dealer or our company for handling.

## VI. Timetable for Heating up:

Heating Time	0 hour	1 hour	2 hours	3 hours	4 hours
Temperature	18℃	39℃	46℃	51℃	54°C

# **VII. Simple Troubles Shooting:**

Failure Phenomenon	Examination and Solutions	Remarks
		When you confirm or cannot
N. d.H. d.	1. Check if the power source is plugged	determine if they are causes of
Not Heating	in.	the failure, contact the dealer or
		our company for handling.

# **VIII. Product Warranty:**

Warranty Card

Customer Name			Dealer's Stamp
Product Name	Milk Bottle Warmer		
Model No.			
Purchase Date	Y. M.	D	
Dealer			It shall be invalid without the
Address Of Dealer			stamp of this company or the
Phone No. Of Dealer			dealer.

- 1. You will have the free service within one year from the purchase date by this Warranty Card.
- 2. The warranty will not be covered under the following conditions: (charge as per the price)
  - a. The warranty period expires.
  - b. The Warranty Card is not presented.
  - c. The contents of this Warranty Card are altered or not correspondent with the existing article.
  - d. The product is modified or taken apart for repair by oneself without the approval of this company.
  - e. This Warranty Card must be stamped with the purchase date. In case of no warranty stamp, the Warranty shall be deemed void.