

永電工業股份有限公司

432 台中縣大肚鄉沙田路3段245巷83號

TEL : 886 4 26992187 FAX : 886 4 26996248

Web site: www.heatact.com.tw E-mail: elecdeer@ms29.hinet.net

Use Instructions for Coffee Warming Saucer



I. Product Features:

Simple to operate, portable, space-saving and for outgoing and traveling uses

II. Functions:

The 50°C constant temperature device can maintain coffee or boiled water around 50°C all the time to satisfy the desires of consumers for drinking a cup of piping hot coffee.

III. Specifications:

1. Power Consumption: general power plug type: AC110V or 220V; automobile cigarette lighter type: DC 12V ; computer connecting USB type: DC 5V
(These four different specifications cannot be interchangeable used each other.)
Power Consumption: 20W
2. Sizes: $\varphi 115 \times 25 \times \varphi 8$ mm (O.D.×H. ×I.D.)
3. Material: The outer casing is the foodstuff grade of PC plastic, and the heat radiating surface is stainless steel, safe and hygienic.

IV. Operation Instructions:

1. Place the cup loaded with a right amount of boiled water or coffee (hot or cold) in the warming saucer.
2. Plug in the appropriate power source. (Perform as per the specified specification. Do not connect the wrong power source.)
- 3 Start to heat up and maintain it around 50°C.

V. Safety Precautions:

1. This company has coffee warming saucers of different specifications with different voltage, which must not be used alternately to avoid damaging the product.
2. Place the cup on the coffee-warming saucer first and, then, connect the power source. Be sure to unplug the plug from the outlet after use to avoid the idle running.
3. When using, locate the warming saucer even to avoid the coffee spilling and electric leak.
4. If this product is wetted incautiously, blow it dry by hairdryer first to be used then.
5. In the process of heating, do not touch the coffee-warming saucer with hands or other combustibles to avoid any danger.
6. Drink up the mixed coffee within one hour when keeping warm to prevent the coffee degeneration.
7. Wipe the warming saucer for cleaning by wet cloth. Do not place the whole coffee-warming saucer into water.
8. In the event of any damage, stop using and send it back to the dealer or this company for handling.

VI. Simple Troubles Shooting:

Failure Symptoms	Examination and Solutions	Remarks
Not Heating	1. Check if the outlet is plugged in.	If you confirm or cannot determine whether it is the cause of the failure, please contact this company for handling.

VII. Product Warranty:

Warranty Card

Customer Name		Dealer's Stamp
Product Name	Coffee Warming Saucer	It shall be invalid without the stamp of this company or the dealer.
Model No.		
Purchase Date	Y. M. D	
Dealer		
Address Of Dealer		
Phone No. Of Dealer		

1. You will have the free service within one year from the purchase date by this Warranty Card.
2. The warranty will not be covered under the following conditions: (charge as per the price)
 - a. The warranty period expires.
 - b. The Warranty Card is not presented.
 - c. The contents of this Warranty Card are altered or not correspondent with the existing article.
 - d. The product is modified or taken apart for repair by oneself without the approval of this company.
 - e. This Warranty Card must be stamped with the purchase date. In case of no warranty stamp, the Warranty shall be deemed void.