

USER'S MANUAL

JAMMER FOR WIRELESS SIGNAL


Being familiar immediately

Thank you for you using this jammer ,Now, let me introduce and make you have better understanding about the positions of all the buttons, function of accessories and other hardware



Elevation

Left side elevation

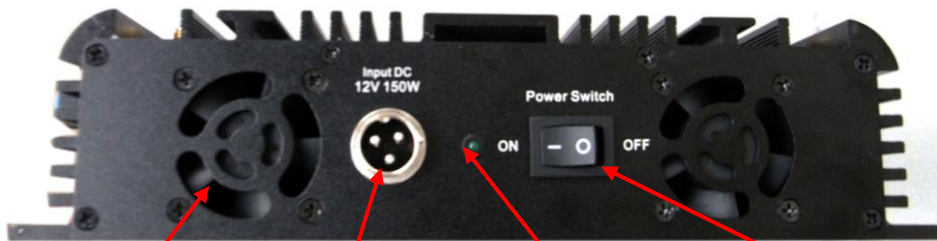

Cooling fan DC12V Power Jack LED Indicator Light Power Switch

Right side elevation



Cooling System

TOP side elevation



CDMA/GSM/DCS/PCS/3G/UHF/VHF/4G/433/315/LOJACK/WIFI/GPS RF Output port(connect antenna)

Technology index

Output port	Frequency	Average out-putting power	Channel out-putting power
CDMA/GSM	850-960MHz	35dBm	5dBm/30KHz(min)
DCS/PCS	1805-1990MHz	33dBm	2dBm/30KHz(min)
3G	2110-2170MHz	33dBm	2dBm/30KHz(min)
WIFI2.4G	2400-2500MHz	30dBm	0dBm/30KHz(min)
GPS	1570-1580MHz	32dBm	5dBm/30KHz(min)
4G LTE	700-803MHz	34dBm	3dBm/30KHz(min)
4G WIMAX	2500-2690 MHz	30dBm	0dBm/30KHz(min)
UHF	400-470Mhz	34dBm	2dBm/30KHz(min)
VHF	135-174Mhz	34dBm	2dBm/30KHz(min)
LOJACK	167-175Mhz	34dBm	5dBm/30KHz(min)
315	315Mhz	33dBm	5dBm/30KHz(min)
433	433Mhz	34dBm	5dBm/30KHz(min)

Power supply: AC adapter (AC220V-DC12V)
 Shielding Radius: (2-40) meters @-75dBm still depends on the strength signal in given area. The shielding radius of VHF/UHF signal should be lesser than cell phone signal.

Dimension: (width, height, length) 238x60x330mm Net weight: 5.5kg

Starting use

Open up the packaging

Carefully open up the packaging case and reserve it for the purpose of loading or shipping in the future.

Please check whether all the things are kept in good condition or not. If you encounter the bad condition of the elements or being damaged, please contact your dealer immediately.

Connecting system

After connecting all of the subassemblies, please connect one side (DC) of power supply wire onto the device's power port, and connect the other side to the power supply jack.



Turning on your jammer

After connecting all of the surrounding elements and tie wires, please press the switch of left side to ON then the jammer will be working normally. The power pilot lamp will be green



DC12V Power Jack Pilot Lamp ON or OFF

Adjustable Switcher

Finding the adjustable switch of system's to adjust each bands RF power output level or turn off without influencing the other bands operation



Turning off your jammer

Finding the switch of system's main-power supply on the system's left side faceplate and turning it off.

Notices

- ⦿ Before linking all the antenna, power supply shall not be switched on at first. Non taking off antenna when the mainframe is in the working condition.
- ⦿ The jammer shall be installed in the position with good ventilation. And large-scale things shall be avoided to ensure to the shielding effect.
- ⦿ When use the jammer outdoors, preventing water shall be taken into consideration.
- ⦿ Antenna shall be used vertical to the ground.
- ⦿ If you used in car, Please make sure the car output adapter is DC12V, **this machine only can be working on DC12V, The Minimum output power of storage battery is 150Watt.**

