


61 Keys Mechanical Keyboard

Operation Specifications

Layout

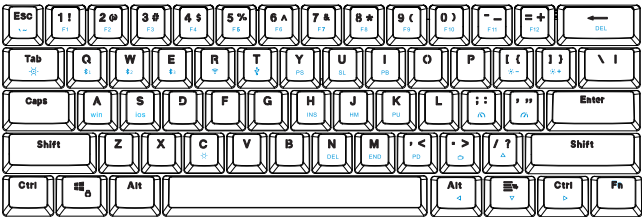

Keyboard Specification

Transmission Mode: Wired or Three mode (Bluetooth&2.4GHz&Wired)
Keycaps Material: ABS
Rated voltage/current : 5.0V/≤100mA (wire)
3.7V/≤60mA (wireless)
Dimension :(L)291 x (W)101 x (H)33mm ±0.5mm
Weight:610 ±15g

Features

- Plug and play USB · Bluetooth · 2.4G · wired three-mode connection for option
- Compact body ·61 key layout for comfortable handling
- Real Mechanical axis keyboard ·resilient · comfortable to touch
- Two color injection moulded keycaps · durable.
- Multi-color ·rainbow · RGB backlight
- Compatible system: Win ME/ Win2000/ Win XP/ Vista/ Win7/ Win8 operating system

Installation method

Wired

- Support plug and play, after connecting with the computer's USB, the computer will automatically detect the keyboard and mouse, no driver or CD

Three mode (Bluetooth & 2.4G & wire)

- FN+Q: Match Bluetooth device KB5.0-1
- FN+W: Match Bluetooth device KB5.0-2
- FN+E: Match Bluetooth device KB5.0-3
- FN+R: Match 2.4G connection
- FN+T:USB mode

Tips :Please toggle switch at the bottom is the ON/OFF switch

FN Shortcut Keys (Wire)

- | | |
|-------------------|--------------------------|
| • FN + “ESC” = `~ | • FN + “U” = Print Scr |
| • FN + “1” = F1 | • FN + “I” = Scroll Lock |
| • FN + “2” = F2 | • FN + “O” = Pause Break |
| • FN + “3” = F3 | • FN + “S” = Last song |
| • FN + “4” = F4 | • FN + “D” = Next song |
| • FN + “5” = F5 | • FN + “A” = play/pause |
| • FN + “6” = F6 | • FN + “F” = Volume- |
| • FN + “7” = F7 | • FN + “G” = Volume+ |
| • FN + “8” = F8 | • FN + “H” = Mute |
| • FN + “9” = F9 | • FN+ “J” = Insert |
| • FN + “0” = F10 | • FN+ “K”=Home |
| • FN+ “.” = F11 | • FN+“L”=Page Up |
| • FN+ “=” =F12 | • FN+“M” =Del |

- FN+“,<” =End
- FN+“,>” =Page Dn
- FN+“/?” = ↑
- FN + “Alt-R” = ←
- FN + “APP” = ↓
- FN + “Ctrl-R” = →

- FN + “[{” = Backlit Brightness-
- FN + “}]” = Backlit Brightness+
- FN + “;,” = Backlit Speed-
- FN + “‘” = Backlit Speed+
- FN+“Back”=Switching backlight effects
- FN + “WIN-L”= Lock win、 APP
- FN+“Space”= Factory data reset

FN Shortcut Keys (Wireless)

- | | |
|-----------------------------------|---|
| • FN + “ESC” = Factory data reset | • FN + “A” = Switching win system |
| • FN + “F1” = Player | • FN + “S” = Switching MAC system |
| • FN + “F2” = Volume- | • FN + “Q” = Bluetooth 5.0-1 |
| • FN + “F3” = Volume+ | • FN + “W” = Bluetooth 5.0-2 |
| • FN + “F4” = Mute | • FN + “E” = Bluetooth 5.0-3 |
| • FN + “F5” = Last song | • FN + “R” = 2.4GHz mode |
| • FN + “F6” = Next song | • FN + “T” = USB mode |
| • FN + “F7” = Play/pause | • FN + “\ ” = Switching 21 kinds of backlight effects |
| • FN + “F8” = Calculator | • FN + “TAB” = Switching 9 colors cycle |
| • FN + “F9” = Home page | • FN + “Shift” = Customize backlight |
| • FN + “F10” = Email | • FN + “↑ ↓” = Backlit Brightness+/- |
| • FN+ “F11” = My PC | • FN+ “←→” = Backlit Speed+/- |
| • FN+ “F12” = Search | • FN+ “Win” = Lock win |

