


图纸编号：FHB-S2-001
品名：说明书
规格：展开尺寸:280*100mm
折后尺寸:70*100mm
材质：105g铜版纸
印刷：单黑印刷
工艺：风琴折
用量：1PCS/台

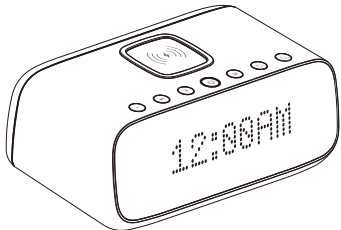

FHB-S2
User Manual

Read the guide carefully before you use the product.
Keep the manual for future reference.
Be ware of cautions mentioned in this guide.

Cautions:

1. In order to reduce the risk of fire or electric shock, do not leave the equipment in the rain or damp
2. Use the accessories only
3. The adapter, which is used as the power device of the equipment, should be kept available at all times.
4. This active speaker has high sound pressure level output.
5. Do not listen too close
6. Do not listen for long time in the high sound pressure level output state.
7. Do not attempt to disassemble the base of the active speaker.
8. Risk: Prevent equipment from falling to the ground.
9. Risk: Prevent equipment from striking sharp corners.

Moisture:

10. Active speakers should be placed away from moisture and water.
11. Do not operate the equipment near water.
12. Do not expose the device to the rain or any dripping water area.
13. Do not splash water on the equipment.
14. Connect the active speaker according to the instructions in the manual.

Connection:

14. Connect the active speaker according to the instructions in the manual.
15. Connect the active speaker to the correct power supply voltage according to the data shown on the device.
16. Protect the power cord from being trampled or clamped, especially at the plug, convenient socket and the power cable lead of the equipment.
17. Unplug the device during a thunderstorm or when it's not used for a long time.
18. Do not put in places where the power plug cannot be used. Pulling the power plug out of the socket is the only way to cut off the power
19. The plug must be available anytime.


Maintenance:

Please ask for maintenance services from qualified maintenance people no matter what type of damages to the equipment. For example:

1. The power cable or plug is damaged.
2. The equipment was splashed with water or there are objects falling into the equipment.
3. The equipment is wet or damp.
4. The equipment is not working or falls on the ground carelessly.

Note: The repairing instructions are only used for qualified maintenance person. Please do not repair the equipment unless the maintenance people is qualified. Otherwise it may cause electric shock.

Buttons instructions

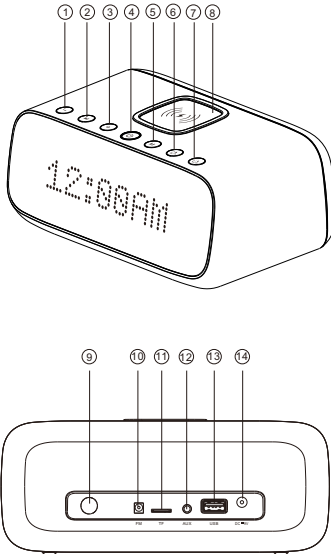

NO	Button	Function
①	⏮	Long click: PREV Short press: volume-(time/date/clock number decrease)
②	⏸	Short press:play/pause,pick/hang up a call, Mute for AUX&FM Double press:dial under bluetooth mode Long press:scan FM, reject phonecall
③	⏭	Long press:NEXT Short press:volume+(time/date/clock number increase)
④	⏻	Long press: back to clock Short press: adjust light brightness
⑤	M	Short press:exchange mode,exchange time under time set status Long press:disconnect bluetooth
⑥	⌚	Long press: enter/exit time set alarm Short press: show set alarm time, enter into setalarm set, and exchange set options
⑦	⌚	Double press: fast turn on/off the alarm clock under time status(alarm clock set)
⑧	🔌	Charge your phone with wireless charging function
⑨	🔊	Bass reflex Enhance bass
⑩	📶	Antena port Plug in antenna
⑪	TF	TF port Insert TF card
⑫	AUX IN	Plug in 3.5mm audio cable to play music in your phone
⑬	USB	Charge your phone with charging cable
⑭	Power	Power supply with 9V/3.1A adapter

1.Bluetooth Mode

- Bluetooth version: 5.0,supports HSP/ HFP/ A2DP/ AVRCP profile. This speaker is with "didi" voice prompt and paring name is FHB-S2.
- ON/OFF: Plug in the power adapter, speaker will enter into time mode (AM/PM indication for 12 hours system, SUN/MOON& STAR icons for 24 hours system) .
- Bluetooth pairing:Long press🔌to turn on the speaker with voice prompt "power on".Short press🔌button into bluetooth mode with🔌blinking,and search FHB-S2 in your phone for connection, after showing🔌for 3 s , it will display time automatically.
- Bluetooth disconnection: long press M for disconnection.
- Brightness adjustment: Short press🔊to switch the light brightness.4 options in total: highlight, bright, power saving, screen off.
- Bluetooth re-connection:speaker will automatically connect the lastest paired bluetooth device.
- Long press⏮/⏭for PREV/NEXT.Short press⏮/⏭for VOL+/VOL-
- Double press📞to dial a call, and short press to pick up , with "dudu"+ English number voice prompt, long press to reject it.
- Long press🔊to exit bluetooth mode and enter into time mode.

2.Wireless Charger

- Wireless charging: once speaker is powered, put your phone on the wireless charging panel to charge directly, with a constant blue light for indication. The light will go off in 4 s after taking away your phone.

3.TF Card Mode

- Speaker will switch to TF card mode automatically after inserting TF card. Short press🔌for play/pause,long press +/- for NEXT/ PREV, short press⏮/⏭for VOL+/VOL-.
- Support music format MP3/WAV/APE/FLAC
- Long press🔊to exit TF mode and back to time display

4.AUX IN mode

- Plug in the 3.5mm audio cable to enter AUX IN mode,short press🔌for play/pause,short press⏮/⏭for VOL+/VOL-

- After plugged audio cable, AUX word displays on screen and then soon back to time display.
- When playing music, double press M to exit AUX mode and back to time mode.

5.FM mode

- Press🔊to switch to FM mode
- Scan stations:long press🔊to scan stations and will store them automatically.(please insert the pick tail antenna for radio signal)
- Short press⏮/⏭for VOL+/VOL-,and long press for NEXT/ PREV stations, press for play/pause.
- Long press🔊to exit FM mode and back to time display.

6.Sleep mode(white noise)

- Short press🔊for sleep mode to play white noise with time display.
- Long press⏮/⏭for NEXT/PREV,short press for VOL+/-
- Short press🔊for play/pause.
- Long press🔊to set cycle play modes by pressing⏮/⏭.🔊 is single cycle,🔊 is order cycle. Short press🔊to set your favorite mode .
- Long press🔊,🔊flashes slowly, short press⏮or⏭to set the play time from 15min to 120 min, long press🔊back to previous set, long press🔊to set down. (🔊 means cycle play,15-120 min means music will shut down after 15-120min)

Remarks: In the setting up process, if there is no setting action within 10 seconds, the speaker will exit setting mode and save the current setting.

7.Clock setting

Step 1:Long press🔊to choose 12h or 24h system.

Step 2:In 10 seconds, short press🔊,hour number flashes slowly, short press⏮/⏭to set the hour number.

Step 3:Then, short press🔊again switch to minute setting, minute number flashes slowly, short press⏮/⏭to set the minute number.

Step 4: short press🔊again to confirm the time. And then directly

switch to week setting, week number flashes slowly, short press⏮/⏭to set the week number.

Step 5: After completion of setting, short press🔊,and the speaker exits time clock setting and store it.

Remarks: During setting process ,if no action within 10 seconds, the speaker will automatically exit time setting mode and save the current setting.

8. Alarm setting

Step 1: Short press the🔊and the speaker displays the alarm time, if no operation, it will return to clock display after 10 seconds.

Step 2: Short press the🔊, the speaker enters the alarm hour setting, the hour value slowly flashes, short press⏮or⏭, and set the number.

Step 3: Short press the🔊, switch to the minute setting, and the minute number will flash slowly, short press⏮or⏭, and set the number.

Step 4: Short press the🔊, switch to the setting of alarm ring, press⏮or⏭, switch and select the alarm bell.

Step 5: Short press the🔊, switch to the alarm week setting, and short press⏮or⏭to select 1-5, 1-7 and 6-7. (1-5 means alarm from Monday to Friday. 1-7 means from Monday to Sunday.6-7 means from Saturday to Sunday.)

Step 6: Short press the🔊, switch to the OFF/ON by pressing⏮or⏭. OFF [OFF alarm], ON [ON alarm].

Step 7: Short press the🔊, and the speaker exits the alarm setting and saves it. fast on/off alarm Settings: under clock status, double-click the alarm button, can turn on/off alarm 1. (same as alarm clock 2).

- **Snooze mode 1:** when the alarm rings, short press any button to pause the alarm and enter the snooze mode. It will ring again in 9 minutes later. Or long press any key, alarm off for the day.
- **Snooze mode 2:** when the alarm rings, it will go snooze after 2 minutes if no operation, and it will ring again 9 minutes later, repeating 3 times and it will not ring again that day.

Note: if there is no setting operation within 10 seconds, the

speaker will automatically exit the setting of alarm clock without saving

Note 2: the setting of alarm clock 1 is the same as alarm clock 2

10. Others

USB output: DC 5V/2A.
There will be output protection when above 2.5V and will recover when less than 2.5A

SPECIFICATION

Product name	Bluetooth speaker
Product mode	FHB-S2
Dimension	200x117x83mm
Weight	460g
BT distance	≥10m
Output power	5Wx2
Power adpter	9V/3A
Power charger	10W

修改记录			
REV NO.	修改内容	审核	日期
1			
2			
3			
4			
5			
6			

设计			说明书				图纸编号	FHB-S2-001	
审核							项目名称: FHB-S2	材质	105g铜版纸
批准								表面工艺	单黑印刷
未 注 公 角度 ±0.5°				图样标记	数量	重量	比例	深圳市汇一高科有限公司	
基本尺寸	P1	P1		P1	P1				
0~6	±0.05	±0.08		±0.08	±0.1	1			1:1
6~30	±0.08	±0.1		±0.1	±0.15				
30~80	±0.1	±0.1		±0.15	±0.2				
80~200	±0.15	±0.15		±0.2	±0.3				
200以上	±0.15	±0.2	±0.3	±0.5	版本号	A0	单位	mm	