

# 泉州市中信和诚电子有限公司

## Quanzhou Hecere Electronic CO.,LTD

### HC-MFC





# PACKING



# SPECIFICATION

Product features:

- 1) HD 2.9-inch color screen
- 2) ID/IC full hand and voice broadcast (in Chinese).
- 3) Support read write frequency: 125KHz, 250KHz, 500KHz, 375KHz, 625kHz, 750kHz, 875KHz, 1000KHz, 13.56MHz (ISO1443A/B), HID Prox cards.
- 4) Support read: TK4100/EM4100/EM4200, Mifare classic ,Ultralight, NTAG213/215/216, HID 1386/1326/1346.
- 5) Support cards write: HID 1386/1326/1346, T5577, EM4305, 13.56Mhz UID Changeable.
- 6) Digital key input number can be directly inputted.
- 7) 4 AAA batteries supply or use with USB power supply.
- 8) Small and portable.
- 9) Please note that it can crack most but not all encryption cards.

# INSTRUCTION




User's manual

1. Start: Press the "POW (power switch)" , machine open.
2. Chose Working Frequency: Press "CHANGE(Frequency Switch)" change the working frequency, or press "ANTO(auto scanning)" machine will change the proper working frequency to fit the cards
3. Read Card: After chose the right working frequency, put the old card at induction zone, press the "READ" button, if read successfully, voice prompt: "read success", if read fails, voice prompt: "read failed"
4. Write Card: Put the new card in the induction zone, press the "WRITE" button, if successful, the red led flashes once, voice prompt: "write success", if failed, red led flashing fast, voice prompt: "write failed".
5. Press "CODE", the voice prompt "Please enter card number", then input card number, press "ENT" button, voice prompt "enter correct". put new card on induction zone, press the "WRITE" button, then new card write successfully.

## Encryption 13.56Mhz cards

Please read carefully and follow the steps below:

1. Use the software to crack the 13.56mhz encrypted cards.
2. Connect the copier with computer via USB cable and then press the "on/off" button. The the copier will be show the "Disclaimer" page. Press the button "OK" to agree with the disclaimer. DO NOT press any button on the copier.
3. Your computer will show a removable disk. Click to open the disk. There is a manual and the software inside.
4. Put your original card on the back side of the induction zone and then press the button "scan" to crack the password. After 2-5 minutes, the password would be cracked.
5. Put one UID changeable card in the induction and press the "write" butt

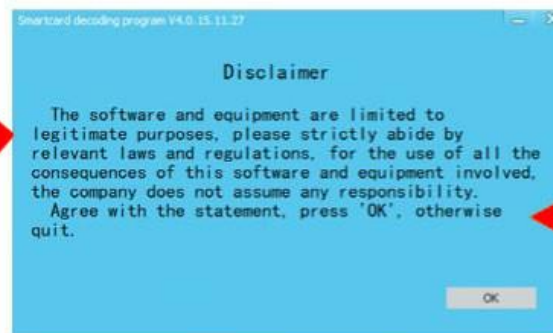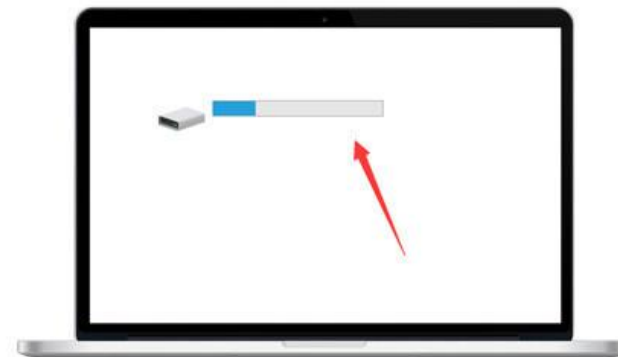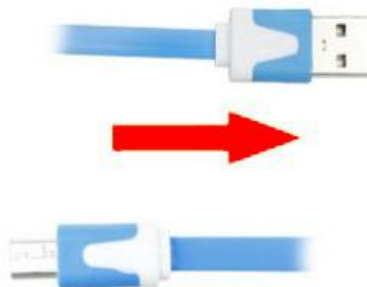

Smart Card  
cloner User's  
Manual-V3.0.15  
1117 .doc

