

FS330W TCP/IP CENTER MONITOR



The console via USB cable to FS330W PC software
The console via IP/Wi-Fi and network to Web Server



Center Monitor
Web Server



Console report all event to center monitor
Center can setting console working mode
Center can setting console alarm function
Center save alarm event for view log

● Applications:

The FS330W software is designed for PC window OS system connecting to alarm console via IP or USB port, so that PC window software can operate alarm console working mode and control the AC power switch on/off and setting the alarm function. The FS330W software is designed for Saving/Loading a txt file of the setting program data.

It can also READ/WRITE the setting program data from alarm console.

It can show all alarm events, working mode, temperature lever data, AC power switch turn on number...etc.

ALARM CENTER MONITOR FUNCTION



RECEIVER ALARM EVENT LOG ON PC

FS330W_PC_V1.33

DISARM 1-01

INT :

+24°C

EXT :

+24°C

POWER SWITCH ON :

12345-

DISARM 2-01

No.	Date	Time	ALARM	Sensor No.	Sensor Name
1	01 / 01	00 : 09	PANIC	30	Door 2
2	01 / 01	00 : 08	DISARM 2	01	
3	01 / 01	00 : 08	DISARM 1	01	
4	01 / 01	00 : 08	PANIC	20	Door 1
5	01 / 01	00 : 08	ZONE8	20	Door 1
6	01 / 01	00 : 08	ZONE3	20	Door 1
7	01 / 01	00 : 08	MEDICAL HELP	20	Door 1
8	01 / 01	00 : 08	ZONE2	20	Door 1
9	01 / 01	00 : 07	MEDICAL HELP	10	
10	01 / 01	00 : 07	FIRE ALARM	10	
11	01 / 01	00 : 07	SILENT PANIC	10	
12	01 / 01	00 : 07	ZONE7	20	Door 1
13	01 / 01	00 : 06	ZONE3	30	Door 2

MONITOR

SWITCH

SECURITY

SETUP

SYSTEM

SETUP ALARM CONSOLE WORKING MODE

FS330W_PC_V1.86

DISARM 1-10

INT : +19°C

EXT : +21°C

POWER SWITCH ON :

-

HOME 2-10

AWAY

PANIC

S.L PANIC

GSM LEVER



HOME

FIRE

MEDICAL

FS132 OPEN

1

2

3

DISARM

ALARM OFF

TIMER : OFF

4

5

6

WORKING DAY DISARM : 24:00 HOME : 24:00 AWAY : 24:00

7

8

9

HOLIDAY DISARM : 24:00 HOME : 24:00 AWAY : 24:00

HOLIDAY

1

2

3

4

5

6

7

CE

0

#

MONITOR

SWITCH

SECURITY

SETUP

SYSTEM