


SPECIFICATION AND USER MANUAL

Model Name: **798wired keyboard** **Keys:99keys**

Product Picture

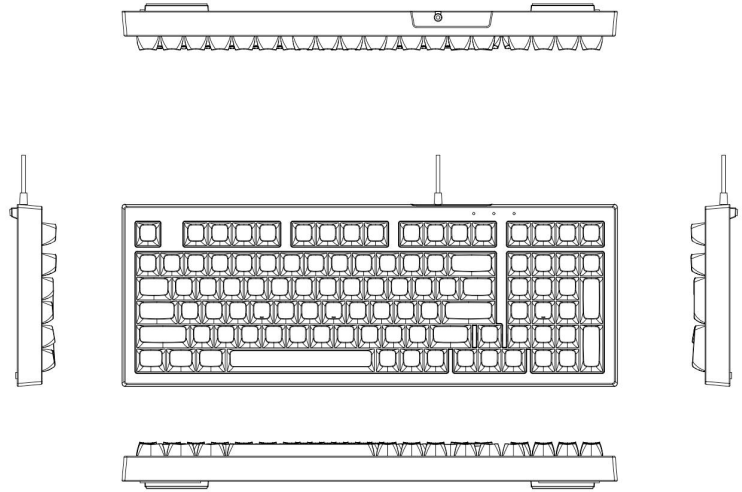

Category	Details	Standard	Details	Standard
BASE SPECIFICATION	Keyboard Type	Membrane Keyboard	Layout Version	EN /US/UK/ES/TR
	Interface Type	USB Detachable	Size (L * W * H)	392.7 (L) × 144.15 (W) × 35.31 (H) ± 1mm
	Connection Mode	Wired	N.W	711g
	Multimedia Function Key	Support	Cable	Type C wired Rechargeable
	Working Voltage	DC 5V	Cable Color	Black or White
	Key Material	ABS	Interface Compatibility	
	Key Resilience	65 ± 10 g	System Compatibility	All Windows operating systems WIN XP, WIN7,WIN8,WIN10 (In Win95, Win98 systems, drivers may be required)
	Key Life	10 million times	Backlight Color	Rainbow
	Backlight	Support	Backlit Breathing Light	Yes
	Backlight Control Key	Yes	Wave Lighting	No
	ESD Test	Passed		
	Editable Software	No	Ergonomic	Yes

	Support Plug and Play		Support	Letter Printing	Laser print
	IC Core		XYX	Working Current	< 50 mA
	Working Humidity		10%~90% RH 25°C	Storage Humidity	5%~95% RH 25°C
	Storage Temperature		-20°C~65°C	Working Temperature	5°C~50°C
	Aesthetic Seam Test		Seam between the top cover and bottom cover: 0.2 ± 0.1 mm.		
	Keyboard Noise Test:		Measured at a distance of 420 ± 10 mm, noise level ≤ 90 dB.		
Selling Points	1	No USB driver is required for plug and play			
	2	FN function			
	3	Comfortable & delicate touch feeling			
	4	Not greasy after long Use/Quite typing /Quick response			
	5	FN+ ↑ Increase Brightness of the LED light FN+ ↓ Decrease Brightness of the LED light			
	6	Fashionable, designed colors			
	7	Abs materials ,not easy to break,super durable			
	8	Different layer key cap design,Ergonomic			
	9	19 keys Anti-ghosting			
Material specification parameter					
Spare Part			Color	Material	Surface Treatment
Cover				ABS	-
Bottom				ABS	-
Key caps				ABS	-
IRON Plate				IRON	
Two-stage Adjustable Feet				ABS	
Foot pad				Rubber	

KEY COMBINATION	
FN+F1	Open the player
FN+F2	Volume-
FN+F3	Volume+
FN+F4	Mute
FN+F5	Previous song
FN+F6	Next song
FN+F7	Play/Pause
FN+F8	Stop
FN+F9	Homepage
FN+F10	Mail
FN+F11	Calculator
FN+F12	Lock PC
FN+W	W A S D is replaced with ↑ ← ↓ →
FN + Left Win	Lock or unlock the Left Win key or App key
19keys Anti-Ghosting	
Q、A、Z、W、S、X、E、D、C、B、Space、↑、↓、←、→、Tab、Alt-L、Ctrl_L、Shift_L	