

3. Programming Guide

3.1 Detailed Programming Guide :

Programming Password Default: 123456, all password can be 3~6 digits

Purpose		Operation		Remark
Basic Function	Change Programming Password	# Programming Password # 0 new Programming Password #	New Programming Password #	If Programming Password lost, perform 3.2 to reset to Factory Default (123456).
	Add user card	# Programming Password # 1 read card #		If add multi cards, read cards continuously
	Set Common Access Password	# Programming Password # 21 new Common Access Password #		Common Access Password is only one. Open method: Common Access Password #
	Delete all users	# Programming Password # 40 0000 #		Delete all cards and PIN except Common Access Password
	Delete user by read card	# Programming Password # 41 read card #		If delete multi cards, read cards continuously
Expand Function	Add Private Access Password(PIN)	# Programming Password # 22 PIN #		PIN can be more, Unlock door method: PIN #
	Add card by input card No.	# Programming Password # 23 input card No. #		Card No. is 10-digit or 8-digit, machine auto-identify
	Add multi-card by input card No. zone	# Programming Password # 24 input start card No. card Qty #		Card Qty is 4-digit (If one-time add twenty cards, input 0020)
	Add "card +PIN"	# Programming Password # 3 read card PIN #		If modify PIN, see 3.5
	Delete user by input User ID No.	# Programming Password # 42 input User ID No. #		About User ID No. see 3.4
	Delete user by input card No.	# Programming Password # 43 input card No. #		Card No. is 10-digit or 8-digit, machine auto-identify
	Delete user by input PIN	# Programming Password # 44 input PIN #		PIN is 3~6 digits.
	Delete all PIN users	# Programming Password # 45 1111 #		Use to PIN users (Do not include Card users and Card +PIN users)
	Change Open time	# Programming Password # 5 XX #		XX can be 2-digit, and the max. is 99. If input 00, the signal output time is 0.2 Secs.
	Set Open mode	# Programming Password # 6 XX #		XX can be 01 (only card) / 02 (card or Access Password) / 03 (card+PIN)
	Reader setting (For options)	# Programming Password # 6 04 #		The machine can be used for reader (W26 output)
	Security function Setting	# Programming Password # 7 XX #		XX can be 01/02 (Security function OFF/ON) and 03/04 (Anti-dismantle alarm OFF/ON)
	Anti-dismantle Alarm setting (For options)	Remark: Security Function ON means System would be locked for 5 Minutes if continue to read illegal card or input wrong Access Password for 10 times.		
	Backlight setting (For options)	# Programming Password # 8 XX #		XX can be 01/02/03 (Normal ON / Normal OFF / Auto)
	Reset Factory Default	# Programming Password # 8 99 #		Except Programming Password and Manager Card
	Set Manager Card	# Programming Password # 91 read MAC read MDC #		First read card is Manager Add Card and Second read card is Manager Delete Card.