 
 




## Q37 功能示意图

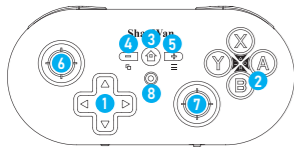

- |             |               |
|-------------|---------------|
| 1 方向键       | 9 L/L2 键      |
| 2 X/Y/A/B 键 | 10 R/R2 键     |
| 3 开机回连键     | 11 Type-C 充电口 |
| 4 -/View 键  | 12 Pair 开机配对键 |
| 5 +/Menu 键  | 13 LED 灯      |
| 6 左摇杆/L3 键  | 14 拨动开关: 模式切换 |
| 7 右摇杆/R3 键  | 15 复位孔        |
| 8 O 键       |               |

## Android / iOS / Windows

安卓 9.0 / iOS 13.0 / Win 10 及以上

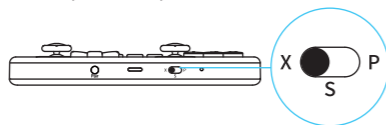


### 蓝牙连接

1. 拨动开关: 拨到 X 档为 X-Input 模式。
2. 首次使用 (开机配对):
  - a) 按 Pair 配对键开机配对, LED 快闪。
  - b) 到系统蓝牙设备内, 搜索蓝牙名为 **XBOX Wireless Controller** 的设备进行配对连接。
  - c) 连接成功 LED 蓝色常亮。
3. 再次使用 (开机回连):
  - a) 按 开机回连键, LED 蓝色慢闪。
  - b) 回连成功 LED 蓝色常亮。
4. 按 Pair 配对键关机。

## Switch 模式

没有 NFC 功能, 不适用于 Joycon

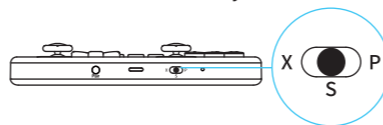


### 蓝牙连接

1. 拨动开关: 拨到 S 档为 Switch 模式。
2. 首次使用 (开机配对):
  - a) 按 Pair 配对键开机配对, LED 快闪。
  - b) 在 Switch 主机, 选择手柄 Controllers → 更改握把/顺序 Change Grip/order, 进入到 Switch 主机配对界面进行配对。
  - c) 连接成功 LED 绿色常亮。
3. 再次使用 (开机回连):
  - a) 按 开机回连键, LED 绿色慢闪。
  - b) 回连成功 LED 绿色常亮。
4. 按 Pair 配对键关机。

## PS4 模式

没有触摸板功能

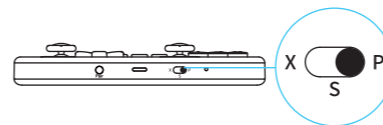

### 蓝牙连接

1. 拨动开关: 拨到 P 档为 PS4 模式。
  2. 首次使用 (开机配对):
    - a) 用 TYPE-C USB 连接到主机, LED 快闪。
    - b) 按 键连接成功 LED 红色常亮。
  3. 再次使用 (开机回连):
    - a) 按 键开机回连, LED 红色慢闪。
    - b) 回连成功 LED 红色常亮。
  4. 按 Pair 配对键关机。
- 注: 按 Pair 开机配对, 可以连接高版本的安卓或iOS。

## O 键功能

- X档:** 开关陀螺仪体感功能  
 第 1 次按 O 键, 陀螺仪替代左摇杆水平轴, LED 闪 1 次  
 第 2 次按 O 键, 陀螺仪替代右摇杆, LED 闪 2 次  
 第 3 次按 O 键, 恢复默认
- S档:** 截屏键  
**P档:** PS4 触摸板下压键

## 固件升级

在关机状态下, 按 **L+X+** 连接安卓或苹果手机 GamepadSpace-Q37 蓝牙设备。  
 手机应用市场下载 GamepadSpace App 进行固件升级。

## 附加功能

在关机状态下, 按 **R+X+** 连接安卓 ShanWan Q37XSP 蓝牙设备。手机应用市场下载安装 ShootingPlus App 映射玩触屏游戏。

## 电性参数

工作电压: DC3.7V  
 工作电流: < 90mA  
 持续使用时间: > 10H  
 休眠电流: < 5uA  
 充电电压/电流: DC5V/500mA  
 蓝牙传输距离: <= 8M  
 电池容量: 500mAh  
 待机时间: 满电放置30天

## 手柄充电 / 休眠 / 唤醒功能

1. 手柄在充电时, LED 指示灯慢闪, 充电后常亮。
2. 睡眠 / 唤醒功能:
  - 配对状态: 2分钟内没有配对成功会进入休眠。
  - 回连状态: 1分钟内没有回连成功会进入休眠。
  - 已连接蓝牙: 15分钟内不使用会进入休眠。
 按 Pair 配对键关机。短按 键直接回连。
3. 电池电量不足时, LED 指示灯快闪提示。

## 陀螺仪校准

关机状态下, 放平手柄, 按 **+ + X +**。

## 摇杆设置

### 摇杆校准

1. 开机状态, 按 **+ +** 进入校准状态;
2. 顺时针逆时针大幅度转几圈摇杆;
3. 再次按 **+ +** 退出校准状态。

### 摇杆画方圆切换

R3 + **+ +** (默认为画圆)。

注: R3 键为右摇杆下压按键。

 
 



Q37XSP 使用教程



QQ 售后群 958810417


## Q37 Functional diagram

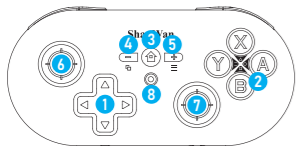

- |                            |                         |
|----------------------------|-------------------------|
| 1 D-pad Button             | 9 L/L2 Button           |
| 2 X/Y/B/A Button           | 10 R/R2 Button          |
| 3 Reconnect/Power Button   | 11 Type-C Charging Port |
| 4 -/View Button            | 12 Pair/Power Button    |
| 5 +/Menu Button            | 13 LED                  |
| 6 Left Joystick/L3 Button  | 14 Mode Switch          |
| 7 Right Joystick/R3 Button | 15 Reset Hole           |
| 8 O Button                 |                         |

## Android / iOS / Windows

Android 9.0 / iOS 13.0 / Win 10 and above

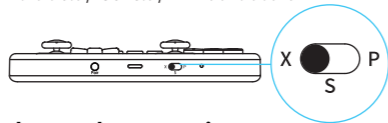


### Bluetooth connection

- Flip the switch: Switch to **X** to enter the X-INPUT mode.
- First use (Power-on pairing):
  - Press the Pair button to start the pair, and the LED will blink.
  - Turn on your device's Bluetooth search and connect the Bluetooth device "**XBOX Wireless Controller**".
  - The LED is always blue when reconnection is successful.
- Use again (Reconnection):
  - Press the button to power on and the LED will blink blue slowly.
  - The LED is always blue when reconnection is successful.
- Press the Pair button to power off the device.

## Switch mode

No NFC function, not available for Joycon

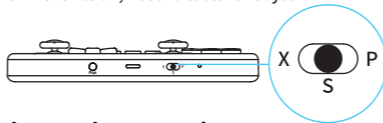


### Bluetooth connection

- Flip the switch: Switch to **S** to enter the Switch mode.
- First use (Power-on pairing):
  - Press the Pair button to start the pair, and the LED will blink.
  - On the switch console, select System Settings Controllers and Sensors Change Grip/Order to enter the switch console matched page.
  - The LED is always green when reconnection is successful.
- Use again (Reconnection):
  - Press the button to power on and the LED will blink green slowly.
  - The LED is always green when reconnection is successful.
- Press the Pair button to power off the device.

## PS4 mode

No touchpad function

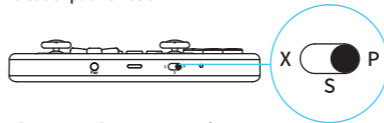

### Bluetooth connection

- Flip the switch: Switch to **P** to enter the PS4 mode.
  - First use (Power-on pairing):
    - Using TYPE-C USE connect the PS4 console, and the LED blink quickly.
    - Press the button to connect successfully. The LED is steady red.
  - Use again (Reconnection):
    - Press the button to power on and the LED will blink red slowly.
    - The LED is always red when reconnection is successful.
  - Press the Pair button to power off the device.
- Note:** Press Pair to boot the pair, you can connect to a higher version of Android or iOS.

## O Button function

**X mode:** Switch gyroscope body sensing function.

Press O button for the first time, the gyroscope replaces the horizontal axis of the left joystick, and the LED flashes once;

Press O button for the second time, the gyroscope replaces the right joystick, and the LED flashes twice; Press O button for the third time to restore to default.

**S mode:** Screen capture button.

**P mode:** Press down key on PS4 touchpad.

## Firmware upgrade

In the off state, press **L + X +**  to connect to the GamepadSpace-Q37 Bluetooth device of Android or Apple phone.

Mobile App Market Download and install the Gamepad-Space App for firmware upgrade.

## Additional function

In the off state, press **R + X +**  to connect to the Android ShanWan Q37XSP Bluetooth device.

Download and install ShootingPlus App in the mobile App Market to play touch screen games.

## Electrical parameters

**Working voltage:** DC3.7V

**Working current:** < 90mA

**Continuous use time:** > 10H

**Sleep current:** < 5uA

**Charging voltage/current:** DC5V/500mA

**Bluetooth transmission distance:** <= 8M

**Battery capacity:** 500mAh

**Standby time:** 30 days (fully charged)

## Charging / Sleep / Wake-up

When charging, the LED will blink slowly; When the battery is full, the LED will keep bright.

### Sleep / Wake-up function:

**In pairing state:** the controller will sleep if it's not paired successfully within 2 minutes.

**Connect back state:** The controller will sleep if it is not connect back within 1 minutes.

**Bluetooth is connected state:** The controller will sleep if the controller is not used within 15 minutes.

### Wake-up function:

Press the to connect back when you need to wake-up it.

## Gyro calibration

In the off state, lay the controller flat and press the + **X** + .

## Joystick settings

### Rocker calibration

- in the boot state, press + to enter the calibration state;
- Turn the joystick several times clockwise and counterclockwise;
- Press + again to exit the calibration state.

### Joysticks draw square or circle

R3 + (default is circle).

**Note:** The R3 Button is press the Right Joystick.