 
 


SMA ST MALE TO N ST FEMALE CABLE ASSEMBLY

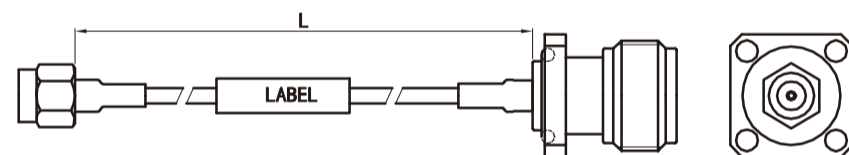


CONNECTOR A	CABLE	CONNECTOR B	Frequency range	Return loss
FS09.116a.00	.085	FS41.372.00	0-6 GHz	-16 dB max

MMCX R/A MALE TO TNC ST FEMALE CABLE ASSEMBLY

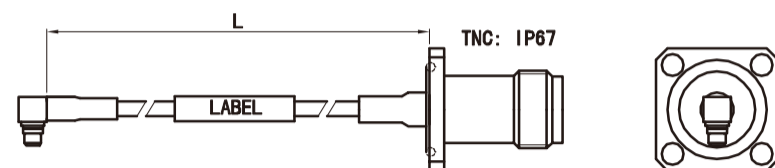


CONNECTOR A	CABLE	CONNECTOR B	Frequency range	Return loss
FS48.25.00	2/50s	FS51.39.00	0-5 GHz	-14 dB max

 MCX R/A MALE TO TNC ST FEMALE CABLE ASSEMBLY

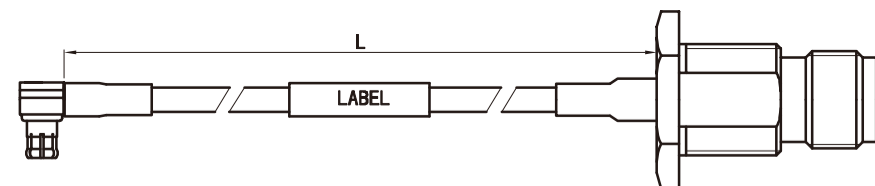


CONNECTOR A	CABLE	CONNECTOR B	Frequency range	Return loss
FS47.28.00	.085	FS51.33.00	0-6 GHz	-20 dB max

 SMA ST MALE TO BMA ST FEMALE CABLE ASSEMBLY

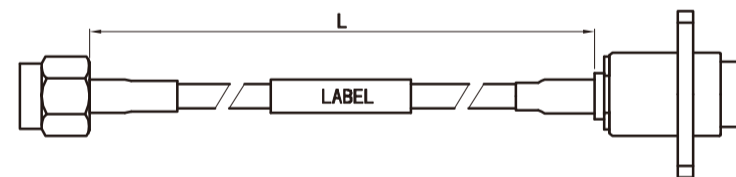


CONNECTOR A	CABLE	CONNECTOR B	Frequency range	Return loss
FS09.116.00a	.085	FS44.11.00	0-1 GHz	-15 dB max

 SMA R/A MALE TO 4.1/9.5 R/A FEMALE CABLE ASSEMBLY

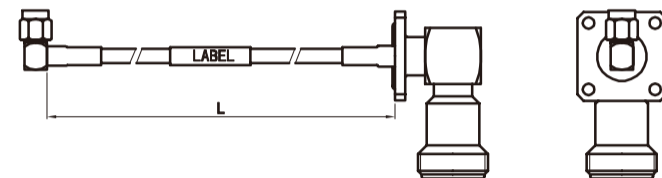


CONNECTOR A	CABLE	CONNECTOR B	Frequency range	Return loss
FS09.119.00b	5/50S	FS76.03b.00	0-5 GHz	-20 dB max

 N ST MALE TO N ST MALE CABLE ASSEMBLY

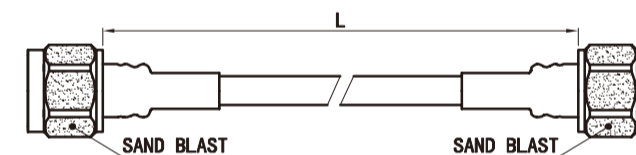


CONNECTOR A	CABLE	CONNECTOR B	Frequency range	Return loss
FS41.329.00B	.250	FS41.329.00B	0-6 GHz	-20 dB max

 N ST MALE TO N ST FEMALE CABLE ASSEMBLY

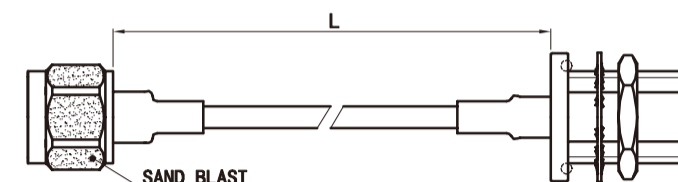


CONNECTOR A	CABLE	CONNECTOR B	Frequency range	Return loss
FS41.142.00	.141	FS41.348.00	0-6 GHz	-20 dB max

 N ST MALE TO SMA ST MALE CABLE ASSEMBLY

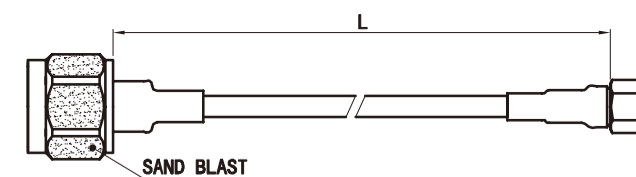


CONNECTOR A	CABLE	CONNECTOR B	Frequency range	Return loss
FS41.142.00	.141	09.229.00	0-6 GHz	-20 dB max

 SMA ST MALE TO SMA ST FEMALE CABLE ASSEMBLY

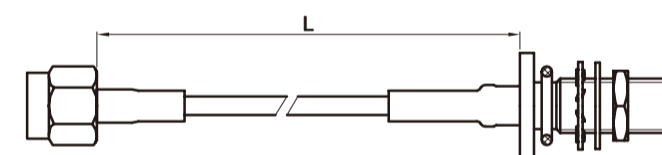

CONNECTOR A	CABLE	CONNECTOR B	Frequency range	Return loss
FS09.116.00a	.085	FS09.253.00	0-6 GHz	-20 dB max

 SMA ST MALE TO MMCX R/A MALE CABLE ASSEMBLY

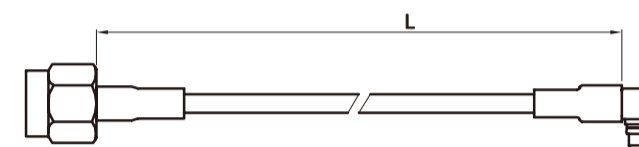

CONNECTOR A	CABLE	CONNECTOR B	Frequency range	Return loss
FS09.116.00a	.085	FS48.15.00	0-6 GHz	-20 dB max