

TITLE
标准书名称

TK53C 键盘规格书

INITIATED DATE
制定日期

2025/10/25

REVISED DATE
修定日期

music volume; FN + F7 = Increase volume; FN + F8 = Mute; FN + F9 = Previous song; FN + F10 = Next song; FN + F11 = Play/Pause; FN + F12 = Stop

● MAC 系统多媒体功能 Multimedia function

FN+F1=屏幕亮度减少; FN+F2=屏幕亮度增加; FN+F3=切换应用(ctrl+方向键上); FN+F4=多窗口预览(WIN+TAB); FN+F5=音乐; FN+F6=音乐减; FN+F7=音量加; FN+F8=静音; FN+F9=上一首; FN+F10=下一首, FN+F11=播放/暂停; FN+F12=停止 FN + F1 = Decrease screen brightness; FN + F2 = Increase screen brightness; FN + F3 = Switch applications (Ctrl + Up arrow); FN + F4 = Multi-window preview (Win + Tab); FN + F5 = Music; FN + F6 = Decrease music volume; FN + F7 = Increase volume; FN + F8 = Mute; FN + F9 = Previous song; FN + F10 = Next song; FN + F11 = Play/Pause; FN + F12 = Stop

● 右上角 4 个多媒体 Four multimedia items in the upper right corner

从左到右: 计算器, 搜索{(win+space)MAC 系统}, 截屏{(WIN+shift+s) win 系统/ (winl+shift+3) Mac 系统}, 锁屏{(WIN+L) win 系统/ (WIN+ctrl +Q) Mac 系统} From left to right: Calculator, Search {(Win + Space) for Windows system / (Command + Space) for Mac system}, Screenshot {(Win + Shift + S) for Windows system / (Command + Shift + 3) for Mac system}, Lock Screen {(Win + L) for Windows system / (Command + Control + Q) for Mac system}



● 切换系统 Switching system

FN+O 切换为 MAC 系统, win 和 alt 互换, 指示灯亮红灯; FN+P 切换为 Win 系统, 指示灯熄灭 FN+O switches to MAC, win and alt switch, and the indicator turns red. FN+P switches to the Win system, and the indicator is off

● 锁 FN 功能 locks FN function

按下 FN+ESC,即可锁定/解锁 FN 按键, 锁定状态, 按下 F1~F12 即为对应的多媒体功能。Press FN+ESC to lock/unlock the FN button, lock the state, press F1 to F12 to display the corresponding multimedia function

layout 如下图所示: