

USER MANUAL


- Safety Precautions and Maintenance**
- Before using this monitor, please read the instructions carefully. Store in a safe place for future reference.
1. Unplug the monitor before cleaning it with a slightly damp cloth.
 2. It is recommended to wipe the screen with a clean, dry cloth when the monitor is switched off.
 3. Do not use alcohol or ammonia-based liquids.
 4. This monitor is designed with ventilation holes; please do not cover or block them.
 5. Avoid placing the monitor near an electric heater or in an enclosed room without ventilation.
 6. Please do not insert objects or spray any liquid on the monitor.
 7. Please do not position the monitor on an uneven surface. Doing so may cause the monitor to fall and become damaged or cause injury to the user.
 8. Unplug the monitor if it will not be in use for an extended period of time.
 9. Please do not place heavy items on the monitor or electric cord.
 10. Do not open the monitor's back panel, as the monitor contains high voltage currents.



The lightning flash with arrowhead symbol, within an equilateral triangle, is intended to alert the user to the presence of "dangerous voltage" within the product's enclosure that may be of sufficient magnitude to constitute a risk of electric shock.

The exclamation point within an equilateral triangle is intended to alert the user to the presence of important operating and maintenance (servicing) instructions in the literature.

- What's in the Box?**
- Monitor
 - Stand
 - AC adapter + power cable
 - HDMI cable
 - Quick start guide
 - Warranty card
- Features**
- 16.7M High Quality Image Colors
 - Smart Image Screen – OSD with simple layout and easy selection
 - Smart Controls
 - Auto Function – when personal settings aren't set, the monitor will auto-adjust to optimum settings
- Basic Setup**
1. Connect the proper cable (HDMI/VGA) from your monitor to your PC.
 2. The monitor has a wide power voltage range.
 3. Connect the power cable to the monitor's power socket and a power source.
 4. Turn on the power source supply.
 5. To switch on the monitor, press the power control on/off key (first button from the bottom at the rear panel.)
- DC Power Port VGA Connector HDMI Connection

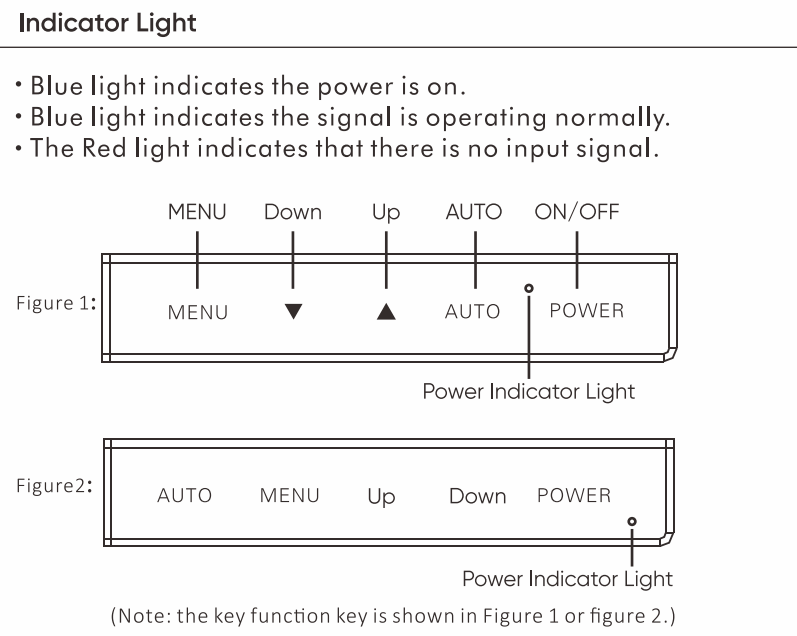

Compatible Resolutions		
RESOLUTION	H-FREQUENCY (KHZ)	V-FREQUENCY (HZ)
1440x900	55.47	60.00
	55.94	60.00
1680x1050	64.67	60.00
	65.29	60.00
1920x1080	67.50	60.00

Screen Image Setups

- The control panel at the rear has five keys to adjust the monitor settings with the aid of the on-screen display.

Control Panel Buttons:

- Menu: Displays main menus; alternate function: Enter
- Down/Up: Adjust Brightness and Contrast; Navigate up/down when in MENU
- AUTO: Acts as Auto-config; acts as EXIT when in MENU
- Power: ON/OFF button

Adjustment Settings				
MAIN MENU ITEM	MAIN MENU ICON	SUB MENU ITEM	SUB-SUB MENU ITEM	DESCRIPTION
LUMINANCE		BRIGHTNESS	None	Adjusts display brightness
		CONTRAST	None	Adjusts display brightness
		Standard	None	Normal use mode
			Internet	Internet application mode
		ECO MODE	Game	Game application mode
			Movie	Movie playing application mode
		DCR	On / Off	Enables / Disables DCR
IMAGE SETUP		H. POSITION	None	Adjusts the horizontal position of the display
		V. POSITION	None	Adjusts the vertical position of the display
		CLOCK	None	Adjusts the display's clock to reduce vertical noise
		PHASE	None	Adjusts the display's phase to reduce horizontal noise
		IMAGE RATIO	Wide	Adjusts the image aspect ratio to wide-screen mode
			4:3	Adjusts the image aspect ratio to 4:3 mode
		WARM	None	Set as warm color temperature
COLOR SETUP		COLOR TEMP	Normal	Set as normal color temperature
		Cool	Set as cool color temperature	
			User	Set as user color temperature
		RED	None	Finely tunes red color temperature
		GREEN	None	Finely tunes green color temperature
BLUE	None	Finely tunes blue color temperature		

Adjustment settings (Continued)				
MAIN MENU ITEM	MAIN MENU ICON	SUB MENU ITEM	SUB-SUB MENU ITEM	DESCRIPTION
OSD SETUP		LANGUAGE	None	English, 日本語, 简体中文, 繁體中文, русский, Pyc., Cesna, Polski, Suomi, Deutsch, Português, Español, Français, Italiano, Nederlands, Svenska etc.
		H.Position	None	Adjusts OSD horizontal position
		V.Position	None	Adjusts OSD vertical position
		Timeout	None	Adjusts OSD display time
		Transparency	None	Adjusts OSD transparency
RESET		Auto Config.	None	Auto adjusts the horizontal/vertical position, focus and clock of the image
		Auto Color	None	Adjusts white balance
		Reset	None	Restore to factory settings
EXTRA		Input Select	VGA	VGA (analog) signal input
			HDMI	HDMI signal input

- Troubleshooting**
1. No image on screen
 - a) Check if the monitor is powered ON.
 - b) Verify that the monitor's brightness and contrast are within the normal settings.
 - c) Check if the power indicator is flashing. If so, this indicates that the monitor is not receiving the input signal.
 - d) If connected to a notebook or laptop, make sure that the TV signal has been switched to the correct screen mode.
 2. Image is out of focus or blurry
 - a) Check if the image signal cable is inserted properly (upright position).
 3. Screen is flashing
 - a) The power is insufficient or too weak to connect the monitor.
 - b) To avoid magnetic field around the monitor, do not place the following devices too close to it: speakers, fluorescent lighting, AC transformer, table fan, etc.
 - c) Press the Exit key at the rear of the monitor, and the Auto Adjust Image function will automatically apply, optimizing settings to the display.
 4. Monitor is displaying wrong or unusual colors
 - a) If red, green, blue, or any unusual color disappears, check to see if the signal cord is connected properly. If the plug is loosely connected, it may cause a poor connection.
 - b) Try connecting to another PC for comparison.
 5. Cleaning the monitor
 - a) Make sure that the monitor's power has been switched OFF.
 - b) Do not spray any liquid directly on the screen or plastic panel.
 - c) Use a clean, soft cloth to clean the monitor screen.
 - d) If it is still dirty, you may add a small amount of ammonia-free liquid and alcohol-free glass cleaner to remove excess residue on the monitor screen.