

1. Take the cold air connector
2. The arrow of the cold air connector faces upwards, and the buckle positions ①、②、③、④ correspond to the positions of machine identification A, B, C, and D, respectively. From right to left, buckle into the machine
3. Please rotate the exhaust duct in the clockwise direction of picture 3 (clockwise) to install the exhaust duct on the machine
4. Please rotate the exhaust circular joint in the clockwise direction of picture 4 (clockwise) to install the exhaust circular joint on exhaust pipe
5. Follow No. 3 and No. 4 to install the second exhaust pipe and joint

