

E34

QUICK INSTALL


快速安装



北京炜煌科技发展有限公司
Beijing Bright Technology Development Co., Ltd



●打印机各部件一览 Printer Parts Names

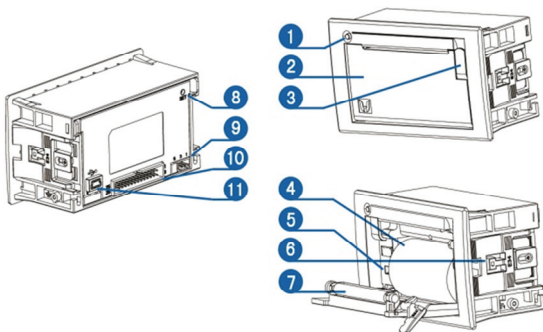

1. 指示灯/LF 键 Indicator Light/LF Button

2. 纸仓盖 Paper Case Cover

3. 顶轴 Axis

4. 纸卷 Paper Roll

5. 起子 Screwdriver

6. 固定架 Fastener

7. 滚轴 Platen Roller

8. SET 键 SET Button

9. 电源接口 Power Connector

10. 通讯接口 Interface Connector

11. USB 接口 USB Connector

按钮开关的操作及指示灯

打印机上电后指示灯保持常亮状态，打印机缺纸时指示灯闪，不能接受数据。
正常上电后，LF 键为走纸键，SET 键无效。

自检测方式

打印机断电，按 LF 键不放手同时给打印机上电，打印机就会打印出自检条。

Operation Specification


After turning on the printer, the indicator light will keep on. When the light flash, it shows that the paper is lacking, and the printer can not receive data.

Press the LF button, the printer will feed paper.

The Self Test

Press the LF button, do not release and turn on the printer at the same time, and then the printer will print out the self-check scrip.

●尺寸 Size

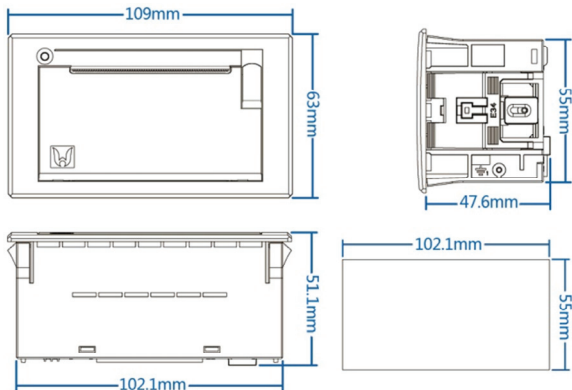

WH-E34 型尺寸 Product Size:

外型尺寸 Outline Dimension: 109mm X 51.1mm X 63mm


开口尺寸 Mounting Dimension: 102.1mm+0.5 X 55mm+0.5

嵌入深度 Inlaid Deepness: 47.6mm

注：请在开口尺寸要求的范围内开口，如开口尺寸过大会造成打印机与面板固定不牢固。

Note: please open the hole within the mounting dimension, opening dimension beyond this range will cause insecure fixation between the printer and the panel.

● 安装和拆机 Installation and Dis-assembly

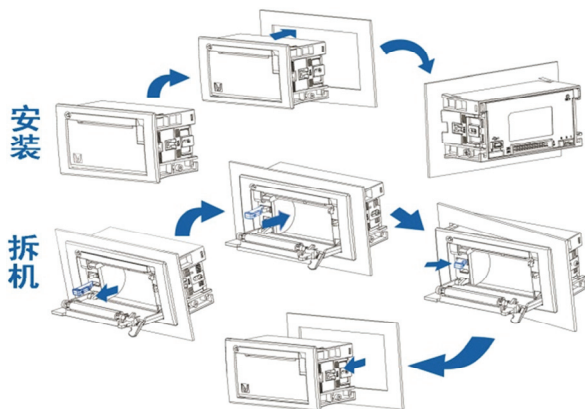

安装方法:

请把打印机嵌入部分直接插入仪器或设备面板的安装孔内即可。

所安装的面板厚度为 1.0~4.0mm 厚的金属板或塑料板。

拆机方法:

打开打印机面板, 拔出左侧下方的起子, 按照图示将起子插入左侧上方固定架的槽内后, 往纸仓方向撬动起子, 把左侧固定架撬出槽后拉动起子把左侧机壳拉出; 右侧操作方法与左侧相同, 就方向相反; 完全抽出打印机后再把起子插入原位置。

Installation Method:


Insert the built-in part of printer into the installing orifice of instrument or equipment.

For the faceplate that will be fixed could be metal plate or plastic plate with thickness from 1.0mm to 4.0mm. Thickness beyond this range would affect the fastness of the printers.

Dis-assembly Method:

Open up the printer panel, pull out the screwdriver inside the left slot (below one), and insert the screwdriver into the above slot from the left side, prying the screwdriver towards the direction of paper cartridge, so that the left side mounting bracket can be drawn out of the mounting hole and left side printer shell will be pulled out as well; Same dis-assembly method goes to the right side mounting bracket with opposite direction. After pulling out the whole printer, insert the screwdriver back into the original slot.

●连接 Connection

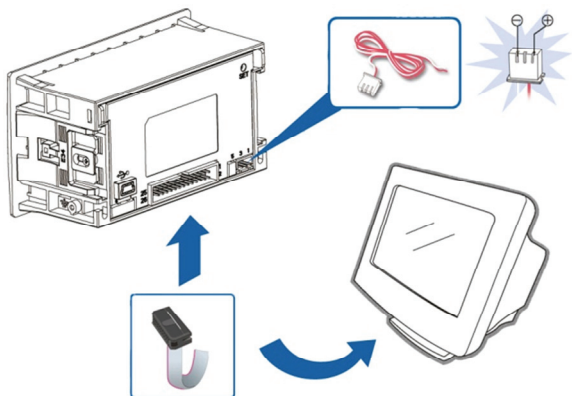

通讯连接:

请严格参照产品背面标签所注参数进行连接。

电源连接:

请严格参照产品背面标签所注参数进行连接。

注意：不要将交流 220V 与打印机电源插座直接连接，工作电压应在额定电压 $\pm 5\%$ 以内，电源极性一定要接正确，否则会給打印机造成永久性损坏，炜煌公司对此不承担保修义务。

Communication Connection:

Please refer to the label of printer.

Power Connection:

Please refer to the label of printer.

Attention: Do not connect AC to the printer directly, operating voltage should be within $\pm 5\%$ rated voltage. Power polarity must be correct, otherwise it will cause permanent damage to printer, brightek company do not assume maintenance compulsory upon this.