

INSTRUCTION FOR REMOTE DUPLICATOR -Four BUTTONS

Deletes the existing code of remote duplicator

Press the button 1 and button 2 at the same time until the LED quickly flashes 3 times .Press and hold button 1 while press 3 times on the button 2 until the LED flashes fastly and continuously ,release the button .The code has been deleted successfully .


1



Copies the code from original remote control

Take your original remote in the left hand and our duplicator in your right,put them close to each other .Press buttons of both remote controls until LED on our duplicator keeps flashing,release the buttons.The left buttons follow the same above operation.

2

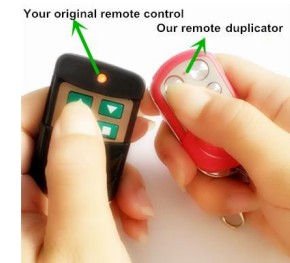

Recovers the existing code of remote duplicator

If you carelessly delete the code of the remote duplicator (Press any button but the LED of remote duplicator not working) ,then how to get memory ?Just follows the below:Press button 3 and button 4 at the same time until the LED keeps flashing quickly .

3



Cautions :

- 1.Your original remote control and remote duplicator should be with the same frequency .
- 2.Please be sure that your original remote control is fixed code one.
- 3.If any button of remote duplicator keeps being pressed for a long time ,the remote duplicator will stop working after 15s to save power .
- 4.Sometimes if feels hard to duplicate ,please replace a new battery for your original remote control

INSTRUCTION FOR REMOTE DUPLICATOR -Four BUTTONS

For adjustable- frequency remote controls:

Put on the jumper: 280 Mhz-350 Mhz

Take off the jumper: 350 Mhz-450 Mhz

Uses a frequency screwdriver to adjust the exact frequency you need.

You need a frequency scanner to assist.

