 


IX. Dual mode Settings (add manager card)



>Please open the public mode first, and then swipe the Administrator card three times in a row, and then put the unadded card, the manager card is successfully added.



>Dual-open mode only works in public mode
>After the dual-open mode is enabled, the manager card needs to cooperate with a temporary user to open the door.
>There is only one manager card, Repeated additions cause the previous card to be replaced.

X. Instructions for using the public mode

- ①>How to set a Temporary User password:
Store the items and close the door. Enter the 4-10-digit password +# key .
- ②>How to set up a temporary user card:
Store items and close the door. Put the card near the swipe area.




>Temporary password/Temporary User card is valid once and automatically invalid after use.
>After the temporary user setting is successful, the red light blinks every six seconds
>Administrators can clear temporary passwords and temporary user cards and unlock them.

Special function introduction

- ▶Illegal card or wrong password alarm:
Illegal card or enter the wrong password 5 times, lock alarm sound 30 seconds
- ▶Low voltage alarm:
When the door opens "dripx8." Indicates that the smart lock is in the low voltage state, please replace the battery in time.
- ▶Restore factory Settings:
Press and hold the front lock setting key/Rest "dripx1." Initialize to private mode.
"dripx3." Initialize to share mode
- ▶System Settings:Swipe the administrator card twice in a row (within 6S) .
 1. Enter 1,1 #, manual/automatic lockout mode switch (For use in private mode) .
 2. Enter 2,2# to switch between sound/silent modes.
 3. Enter 4,4# to switch the dual opening mode (Manager card + temporary unlock).
 4. Enter 9,9# to initialize and convert the mode (Private/public mode) .

Installation diagram

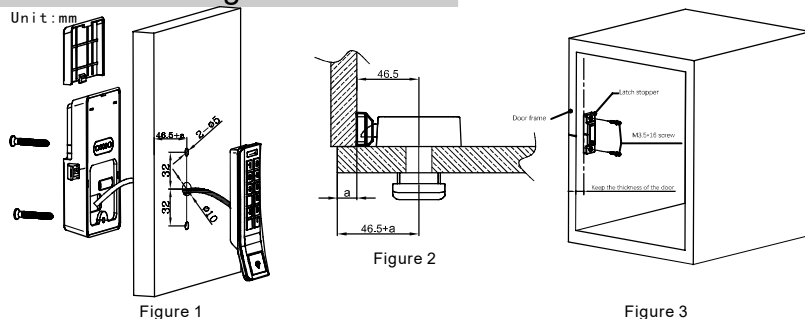

Front and rear panel installation steps:

- ①Drill one hole with a diameter of 15mm and two holes with a diameter of 5mm according to Figure 1.
- ②Pass the cable through the door hole and plug it into the socket on the rear control panel.
- ③Use 2 M4 screws to secure the front and rear control panels to the door .
- ④Install three batteries and secure the battery cover. Suitable for the thickness of the door plate: 12~22mm.


- ▶Latch stopper installation: Use 2pcs M3.5*16 screws to fix the latch stopper to the door.

4

Operation Manual

A810-CK

Product introduction

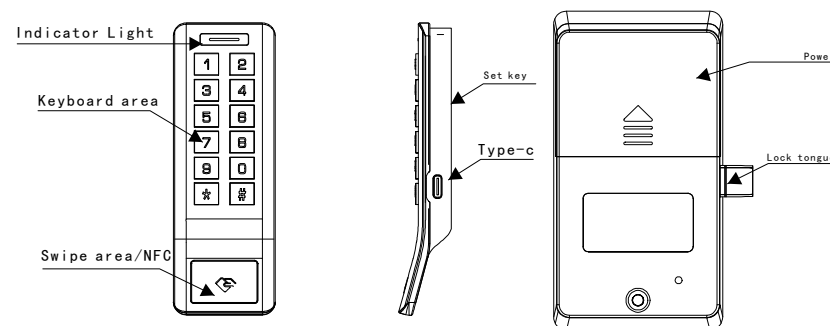


Technical parameter

Card Swiping Induction Distance	0~10mm	Administrator card	3 pieces	User card	10pieces
Operating temperature	-25° ~55°	Administrator password	1 set	User password	1 set
Working humidity	10%~85%RH	Static working current	<25uA	Battery type	3 AA (No. 5) alkaline batteries
Card type	NXF Mifare1	Working current	<120mA	Emergency power supply	Type-c

Operation instruction

1. This lock has two modes of public and private use, the default is private mode;
2. This lock has administrator card and user card, no card is added at the factory;
3. The first card swiped after power on is the administrator card.

I. Unlock/Lock

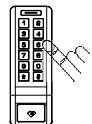

1. Passcode unlock / Lock

>Enter the registered password, press the # key to confirm, and the indicator will be on for 4 seconds


>After successful unlocking, the latch is retracted and re-locked after 4 seconds

***+ # "drip*1" *4 seconds



>If the password is incorrect or an unregistered card lock is used, an error tone "drip, drip" is played;

>When unlocking the lock, a drip, drip, sound is displayed and the indicator is always red, indicating that the battery is in a state of power loss. Replace the battery in time.

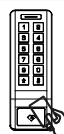

2. Card unlocking / Lock


>The registered card is close to the sensing area, press the # key to confirm, and the indicator will light up for 4 seconds,

>After successful unlocking, the latch is retracted and re-locked after 4 seconds

II. Administrator card setup

1. Administrator card registration

>Initialization status: The first card added is a administrator card;
Place the card near the swipe area and "drip..." After a long sound, the green indicator lights up to complete the registration.

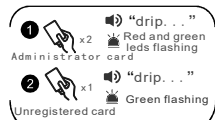

>In the non-initialization state:

Swipe the administrator card twice in a row, then swipe the unregistered card, The administrator card is successfully added and can be added continuously.



>The administrator card provides the functions of adding users, clearing temporary users, and unlocking users.

>If an added administrator card is repeatedly brushed, the card is deleted.

II. Administrator password Settings



>Swipe the Administrator card twice, enter the 4-10 digit password, press the # key, The administrator password is added successfully.




>Admin password has the function of clearing temporary users and unlocking.

>Only one set of administrative passwords.

If you repeat the operation, the original administrator password has been replaced (deleted).

III. User card setup

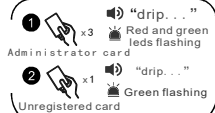

>Swipe the administrator card three times in a row, then swipe the unregistered card, The user card is successfully added. You can continue to add the user card.



>The user card and administrator card cannot be the same.
A maximum of 10 user cards can be added.

>If you repeatedly swipe an added user card, the card is deleted.

IV. User password setting



>Swipe the administrator card three times in a row, then enter the 4-10 digit password and press # to confirm



>The added administrator password cannot be used as the user password

>Only one set of user passwords.
If the operation is repeated, the previous password is replaced (deleted).

V. Delete all user Settings



>Swipe the administrator card four times, press the # key to confirm, The user used is deleted.



>This operation cannot delete the administrator password or administrator card

VI. Manual opening and closing mode setting



 
>Brush the administrator card twice, then enter "1, 1", press the # key, and the manual door opening mode is successfully changed.

>When the door opens, press the # key to lock it



>Manual opening and closing mode can only be activated in private mode.


VII. Silent mode setting

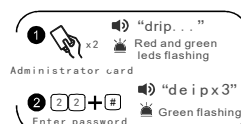

>Swipe the administrator card twice, then enter "2, 2", press the # key, the mute setting is successful.


VIII. Public mode/private mode switch

● Method 1:

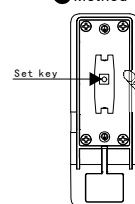

> Press and hold the set button after powering on
> Private mode: "Drip..." Release after a long sound, Set it to private mode
> Public mode: "Drop... Drip... Drop..." Three tones After a long ring, release it and set it to share mode.

● Method 2:

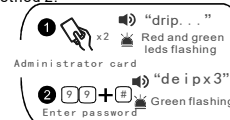

>Swipe the administrator card twice, then enter "9,9", press the # key, the mode switch is successful.



>Both Method 1 and Method 2 can be cyclically switched between private and public modes.

>After the mode switch, all cards and passwords will be cleared, and the smart lock will return to the initial state. Re-register the administrator card before you can use it.