

 
Caution

- 1.To prevent damage, the adapter should be fastened on the wall according to instruction.
- 2.Keep the power plug in a convenient location for easy disconnection of the device.
- 3.When connecting AC power wire, please finish the connection before plugging in the power.

Troubleshooting

Problem	Solutions
No Video/Audio	• Make sure all the connections are secured and properly connected. • Make sure there is nothing obstructing the view of the camera.
No Video , but intercommunication is normal	• Make sure all the connections are secured and properly connected. • Make sure there is nothing obstructing the view of the camera.
No Audio when calling	• Make sure the volume knob on the indoor unit is turned up. • Make sure that there is nothing such as object with strong magnetism interfering with the speaker or microphone . • Make sure all the connections are secured and properly connected.
The outdoor unit can not call the indoor unit	• Make sure all the connections are secured and properly connected.
Door Unlock not Functioning	• Make sure the connections with the locks are secured and properly connected. • Make sure you have the lock wired to a power source enough to make it operate.
No one can hear me outside but I can hear them after calling	• Press TALK key for two-way intercom • Make sure all the connections are secured and properly connected
I can hear outside, but outdoor unit can not hear indoor unit when monitoring	• Press TALK key for two-way intercom as only pressing MONITOR key will prevent outdoor unit from hearing indoor unit. • Make sure all the connections are secured and properly connected.

7" VIDEO DOORPHONE

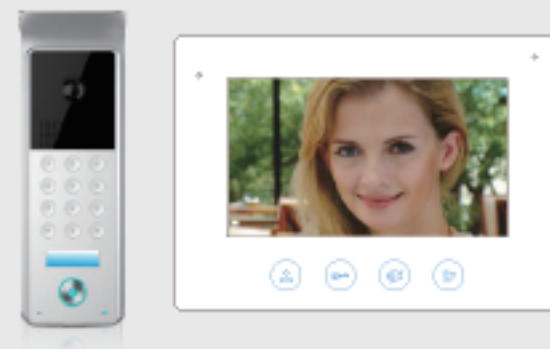

MODEL:ME-7Q4AP

RoHS FC CE

USER MANUAL


Product Description

The color video doorphone can be used to monitor, call, intercom and unlock. It is a product that is very suitable for villa, single house, hotel, office etc, giving you the combined benefit of security and convenience.

Features

- 7" TFT digital screen.
- Hands-free intercom.
- Ultra-thin and touch button.
- Intercom between main monitor and slave monitor.
- Ip55 waterproof, damage-proof, oxidation-proof.
- Do not disturb function.
- Outdoor monitoring.
- Brightness, contrast and talking volume can be adjustable via indoor unit.
- Night vision.
- Enclosed an adapter.
- Can be add up to 1pcs slave monitor to main monitor.
- Support password unlock function.

Package Contents

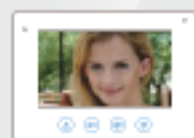

• Indoor unit



• Outdoor unit



• Rain cover



• Adapter



• Bracket for indoor unit



• Screw



• Silicone cap

Outdoor Unit

Night Vision	Red (Standard)
	White (For option)
Operating Temperature	-20°C ~ +50°C
Illumination	0.1 LUX
Resolution	≥700 TV lines (CMOS)
Viewing Angle	120° view angle
Outline Size (W*H*D)	50 x 150 x 26mm
Outline Size (W*H*D)	58 x 174 x 30mm

Safety Instruction

- Keep the indoor unit away from high temperature such as near an oven or in direct sunlight and high humidity areas such as a bathroom and greenhouse.
- Do not install the indoor unit close to a television or any item that could cause interference or jamming of signal to the intercom.
- Do not touch the unit with wet hands.
- Avoid throwing, dropping or hitting the units.
- Clean the camera or screen with a soft cloth. Do not use detergent, thinner, volatile or corrosive liquid.
- Do not expose the camera of the outdoor unit to direct sunlight.
- To use the product make sure it is barrier free and there is no interference.
- Avoid powering the unit off while recording otherwise the data can be lost easily.

Caution

1. To prevent damage, the adapter should be fastened on the wall according to instruction.
2. Keep the power plug in a convenient location for easy disconnection of the device.
3. When connecting AC power wire, please finish the connection before plugging in the power.



Don't throw batteries or out of order products with the household waste (garbage). The dangerous substances that they are likely to include may harm health or the environment. Make your retailer take back these products or use the selective collect of garbage proposed by your city.

Password Unlock

Instructions

1. Setting password:

Take off the Mini jumper(M-J), and then connect the power. Input password with 4 digits "XXXX" and confirm with "*" button, if the indicator LED keeps red for 3 seconds, that means password setting successfully. And then cut down the power and put the Mini jumper(M-J) back. (Notice: Be careful to hold the disassembly switch to avoid being in the alarm state!)

2. Password unlock:

Insert 4 digits, "*" button to confirm, press "" button to cancel.

2.1 If it is the correct password, the door will be opened, at the same time, the indicator LED keeps red for 3 seconds, and then return to standby mode after hearing 3 "Di-Di-Di".

2.2 If it is a wrong password, the door could not be opened, and then return to standby mode after hearing "Di-Di-Di" for 3 seconds.

Notes

1, When testing, it will ring 1 time "Di".

2, When input a wrong password, it will ring "Di-Di-Di".

3, When the password is correct, the door will be unlocked (Unlocking time is 3S), and it will ring, "Di-Di-Di....." for 3 seconds.

4, When tamper is alarming, it will alarm all the time.

Technical Specifications



Indoor unit

Screen size	7"
Resolution	800(H) × 480(W)
Effective area	154.08 (H) × 86.58 (W) mm
Dot pitch	0.0642 (W) × 0.1790 (H) mm
Outline size	214 (W) × 152 (H) × 18 (H) mm
Adapter input voltage	AC100-240V 50Hz/60Hz
Adapter output voltage & current	DC12V 1A
Monitoring time	30S ± 10%
Talking time	60S ± 10%
Working distance	50m (4X0.75mm ² cable)
Power consumption	Static state <0.2W Working state <5W
Operating temperature	-20°C ~ +50°C
Relative humidity	10% ~ 90% (RH)

Installation

A. Indoor unit

- ① Screw the bracket on the wall.
- ② Hang the unit on the bracket after finishing the connection. Plug the two ends of the jack of the power adapter into the sockets of AC power and the unit separately.

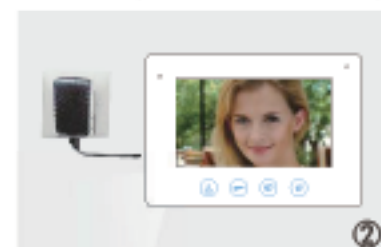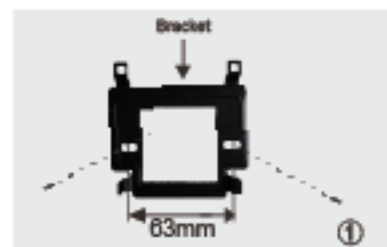

B. Outdoor unit


- ① Fix the unit 1.4m - 1.7m high from the ground (according to the camera effect) so as to avoid direct sunshine.



- ② Drill proper holes in the wall, plug up the screw holes with silicone caps. Fasten the rain cover on the wall with screws.
- ③ Unscrew from the top and the bottom of the outdoor unit, hold the panel and press the button part to take off the metal cover. Take the name plate out and write the name on the paper. Fix the name plate and metal cover back. Screw the panel well with a screw driver.
- ④ Refer to the wiring diagram to do the wire connection.
- ⑤ Fix the outdoor unit on the rain cover with screws.




Wiring Diagram

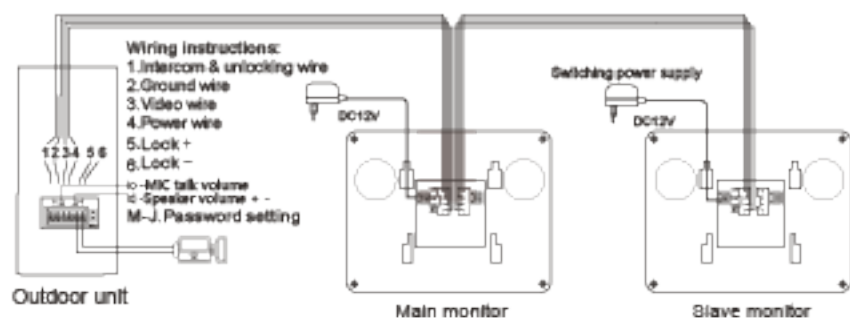

- When the working distance is 10m, use RVV4×0.3mm². If the user wants to lengthen the cable into 10m- 30m, use RVV4 x 0.5mm² connecting wire. If the user wants to lengthen the cable into 30m- 50m, use RVV4 x 0.75mm² connecting wire. The cable of electric lock use RVV2×1.0mm².
- Connect the wiring terminals 1、2、3、4 of indoor unit with wiring terminals 1、2、3、4 of outdoor unit respectively. The wiring terminals of 5&6 of outdoor unit are connected with electric lock through RVV2X1.0mm².

Operation Buttons

Indoor unit

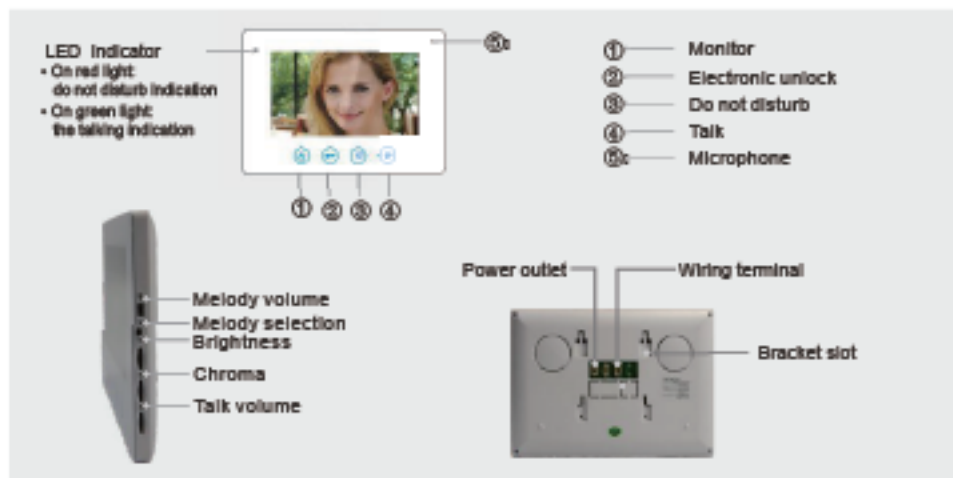

Outdoor Unit



Operation instruction

A. Operation instruction

1. Press CALL button of outdoor unit to call. The doorbell will ring and the images of visitors will show on the indoor unit. Press TALK () to activate the intercom. Press TALK () again to hang up. Each talking time lasts for about 60 seconds.
2. Press UNLOCK () button to release the electronic-lock.
3. Press DO NOT DISTURB () button to activate DO NOT DISTURB function. Under this state, no voice will be heard when someone press the doorbell.
4. Press MONITOR () button to turn on and it can last 30 seconds, or press again to turn off. At the same time, press TALK () button for intercommunication.
5. Press MELODY SELECTION () button to cycle through the different tones available for the doorbell in the monitor mode.
6. Use MELODY (H M L) to adjust the loudness of the built-in speaker of the indoor unit, and use VOLUME () to adjust the volume of microphone.
7. Use BRIGHTNESS () and CONTRAST () to adjust how bright the image appears and how much color is in the image respectively.

B. Communication between main monitor and slave monitor

1. Press call button of outdoor unit and the two monitors will ring at the same time. When one of the monitors is answered, the other one will hang up automatically.
2. Long press () of one indoor unit for 2s to call the other indoor units, the talking can last for 60s. If no one answers the call after 30s, the indoor unit will return to the standby mode.