

75*45mm

使用说明书		
• Long press the power button for 3 seconds to turn on or off the device. • Short press to switch between taking photos, recording videos and viewing playback. • 长按电源键3秒开机或关机。 • 短按切换拍照/录像/回放。 • In the shooting mode, short press to switch filters. • In playback mode, short press and then press down to view files. • In the playback interface, long press the downward key, and a prompt will appear. • Select "Delete Current File" and press the shooting key to confirm. • Under the settings, scroll down for options. • 拍摄模式短按切换滤镜。 • 回放模式短按向下查看文件。 • 在回放界面长按向下键, 出现提示删除当前文件按拍摄键确认。 • 设置中向下选项。	• In shooting mode, short press to switch filters. • In playback mode, short press to view files upwards. • In settings, press upwards to select options. • 拍摄模式短按切换滤镜。 • 回放模式短按向上查看文件。 • 设置中向上选项。 • In the playback mode, use the up and down button to view the contents on the camera's TF card. • 回放模式下通过上下键查看相机TF卡中的内容。	• In photo mode, short press to take a photo. • In video mode, short press to start recording, and short press again to stop recording. • Long press to enter the settings interface; you can set timed shooting, time, language, and volume. • 拍照模式下短按拍照。 • 录像模式下短按开始录像, 再次短按停止录像。 • 长按进入设置界面; 可设置定时拍照, 时间, 语言, 音量。 RoHS FC Made in China