

ACS14-W Standalone Controller without Keypad Manual



Characteristic parameter:

- 1、 Working Voltage: DC10V—DC20V
- 2、 Standby Current: <60mA
- 3、 ID card or EM compatible card, Read Range 5-15CM (distance depends on the coil and the installation environment)
- 4、 Capacity: A registration card, A deletion card, the user card 2000 (**Customizable card 5000 or 10000 card capacity**)
- 5、 You can delete user card individually, by infrared remote control feature.
- 6、 Open the door mould: Swipe user card to open the door and out switch door
- 7、 Output: Relay output (switch); Unlock time 1S, 5S, 15S, reverse, adjustable four ways
- 8、 Operating Temperature: —40°C——60°C
- 9、 Humidity: <95%
- 10、 Remote control receiver distance: 3M
- 11、 Standby, red light with a frequency of 1HZ flash
- 12、 Two reader coil interface, enabling access doors inside and outside the credit card

Issue card operation steps

Operation: Swipe registration card one time (buzz one time, yellow light) —> **Continuous swipe card**, Then this card is the user card (Login is successful, then buzz one time, green light), —> To exit the card operation, just swipe the registration card again. Note: recommended that user's registered copy number, which can be convenient for future management.

After lost card

1、 How to do after lost Registration card, remove the card or forget remote control password?

You can reset the function of card, operation steps as follow:

First off—> Dial No.1 to "ON" position, Then energized (Lights flash, buzz) —> Dial No.1 to "OFF" position, (Lights not flash, buzz stop) —> Continuous swipe two new cards, the first card for the registration card, the second card for deletion, At the same time the system remote control password recovery 123456.

2、 How to do after lost user card?

Operation steps: Reference infrared remote control instructions !

3、Delete all user cards, Operation steps:

Keep deletion card in the card reader to maintain 5S, Continuous flashing lights at this time——>Removed after 5 seconds, the buzzer long call, then all the cards are all deleted.

Infrared remote control operation:

Note: The following operating instructions **XXXXXX** it is system password; **XXXXXXXXXX** Indicates the ID card before ten card, Effective green button flashes once, the buzzer once.

- 1、**Into the system:** Press **XXXXXX OK**——> Green light. (XXXXXX it is system password, the initial value is **123456**)
- 2、**Add user card:** Press **1**, green light flashes, Press **XXXXXXXXXX OK**, or swipe directly, Press C to exit the system operation.
- 3、**Delete user card:** Press **2**, green light flashes, Press **XXXXXXXXXX OK**, or swipe directly, Press C to exit the system operation.
- 4、**Modify the system password:** Press **3**, **XXXXXX** (Six new password) **OK**, Buzzer several times, automatically exit the system
- 5、**NO/NC open:** Press **4**, The system will automatically quit after this operation (Swipe card again, or push button one time, NO/NC function is cancelled)
- 6、**Delete all user card:** Press **7**, The system will automatically quit after this operation, buzzer several times


Other: Any time by pressing C or 15 seconds without operation, it will automatically exit, When enter the remote state the green light, effective Keys, buzzer one time, green light flashes one time; Illegal buttons, buzzer two times, the red light flashing two times.

LED light indicator

- 1、Quickly swipe registered user card, then immediately open the door (green light one time, buzzer one time) .2、Switch is pushed down, immediately open the door (green light one time, buzzer one time)
- 2、Light always flashing, said the next to a card, please move away.

Wiring Diagram

Remote Control

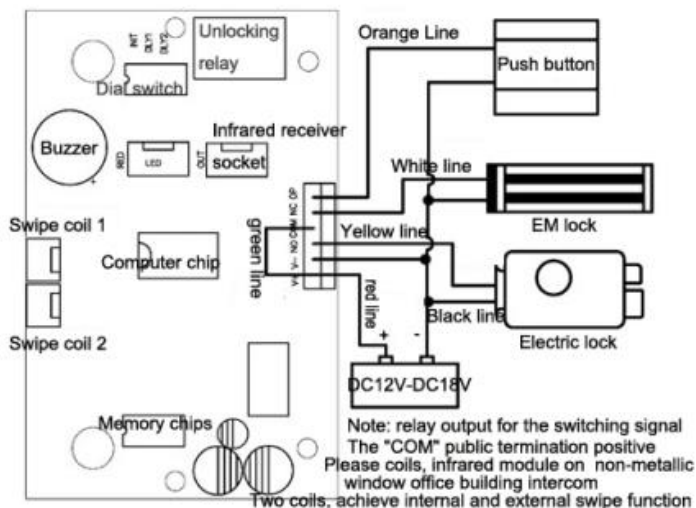

Delay setting method

