

Flip Lens Kids Camera User Manual

Camera Diagram



Detail Instructions

1. Insert Micro SD card

Note: please use brand Micro SD card, format it on a computer before using, a low quality card may not be guaranteed to work properly.

2. Battery Charge

A. With a home daily using mobile adapter connect USB cable to charge the camera

B. When fully charged, screen battery icon will show 100%.

3. Turn on/ off camera

A. Long press the Power button for about 1 seconds, camera will turn on.

B. Long press the Power button 1 seconds, camera will turn off.

4. Mode switch

As below picture, the upside 3 icon is : Photo Mode, Video Mode, Playback Mode
The downside 3 icon is: Setup, Game, MP3 Music(Only support MP3 format)



5. Video recording

- A. Insert Micro SD card, then turn on the camera..
- B. Select Video mode, then click “OK” button to start recording video.
- C. To stop recording video, press the “OK” button again.
- D. In video mode, click UP/Down button to choose different filter
- E. In video mode, click LEFT button one time ,switch to slow motion video mode,click LEFT again switch to Time-Lapse video mode. Click LEFT again back to normal video mode.
- F. In video mode, click Power button to quit video mode.

6. Photo taking

- A. Switch the camera to photo mode ,then Short press the “OK” button to take a photo.
- B. In photo mode, click UP or Down button change to different filters and different photo effects, different cartoon frame.
- C. In photo mode, click right button switch to photo timer function mode.
- D. In photo mode, long press UP/Down button to setup Zoom.
- E. In photo mode, click Power button to quit photo mode.

7. Playback mode

Select Playback mode and click OK button to review the recorded video and photo.
Then click Right/Left button to choose different photo and videos. To delete a photo or video,then click UP or Down button to delete the current video or photo. To quit Playback mode, click Power button.

8. Menu settings

Switch to setup mode and click OK button to start menu setup.

9. Puzzle Games

There are total 5 Puzzle games built-in this camera, select the game mode click OK button to start game.

10. Connect the cable to charge

Charging with USB cable

11. Music Play

Please note, this camera only support MP3 format music.

Download the MP3 music first and copy into Micro SD card, then inset the card into this camera, select the MP3 music mode click OK button into music play mode.

Specifications

Screen	2.0Inch
Battery	400mAh
Charging Time	3Hours
Working Time	100minutes
Video Resolution	FHD (1920*1080P Interpolation) HD (1280*720P Interpolation) VGA (640*480P)
Photo resolution	40M,20M,18M,16M ,12M, 8M , 5M , 3M ,2M
Material	ABS with rubber oil painting
External Storage Media	Max support 32GB(Not include)
Features	Take Photo, Video,5Puzzle Games, 15 Photo Cartoon Frame, 4XDigital Zoom, 10 Different Photo effect, 7Filters,
Product Size	9.1*5.6*4.1cm
Built-In Memory	Built-in memory can take 10photos,but can not record video without memory card