
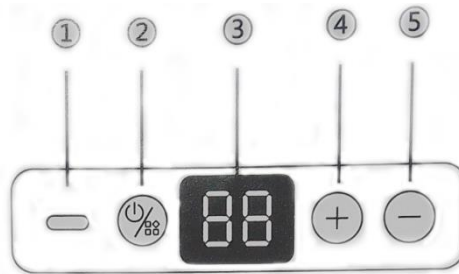


# Eight headed fascia gun

## Instructions for use

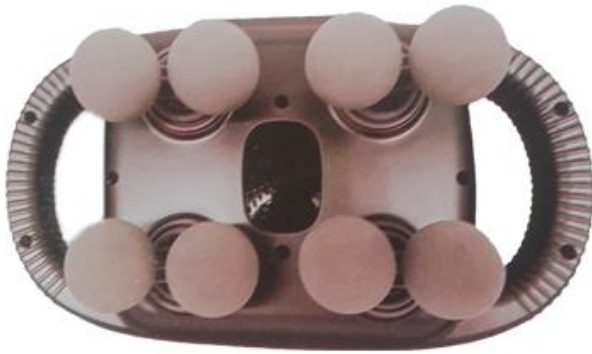

**Model: KM-K80**

### Key function

- ① Type-C charging port
- ② Power on and mode switch button
  1. Long press to power on, short press to switch modes.
  2. In startup mode, the screen displays a 10 minute countdown to the machine.
  3. Short press to switch the red light on or off, displaying P1 or P2.
  4. Short press. When the device is turned on, there is a P1-P2-P3-P4-P5-P6-P7-P8-P9 mode setting.
- ③ The digital display (with white light) has two numbers. When charging, the white number 88 flashes, and when fully charged, the white number 88 displays for a long time.
- ④ The power increase button displays L1-L9, and a 2-second countdown returns to the machine.
- ⑤ The power reduction button displays L1-L9, and a 2-second countdown returns to the machine.

### Maintenance instructions

1. When not in use for a long time, maintain a certain level of power, turn off the power switch, and store in a safe, dry, ventilated, and low-temperature place.
2. When not in use for a long time, it is recommended to charge the battery every six months to prevent damage due to low battery level.
3. Before cleaning the product, please turn off the power switch and wipe it with neutral detergent and a soft cloth. Do not use engine oil, organic solvents, or other chemicals for cleaning, and do not rinse in water.
4. During the transportation process, this product should be fixed to prevent severe vibration, collision, rolling, and falling.

### frequently asked questions

1. Low temperature failure to start: Prolonged exposure to environments below 0 degrees Celsius can lead to a decrease in battery activity; Cannot start and run normally.  
Solution: Leave it in an environment above 0 degrees Celsius for 2 hours, or use a hair dryer to quickly increase the body temperature.
2. Low battery level: If not charged for a long time, the battery will enter a low battery protection state. At this time, it cannot be restarted and cannot function properly.  
Solution: Keep the device turned off, connect the charger, ensure the battery is fully charged, and then try using it again.