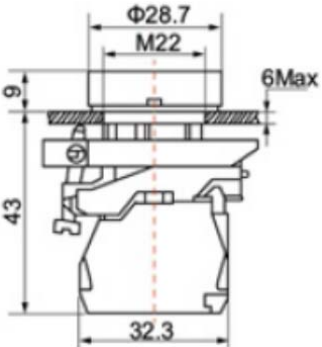 
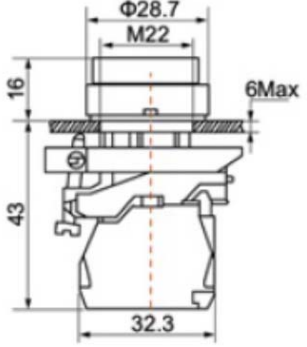 
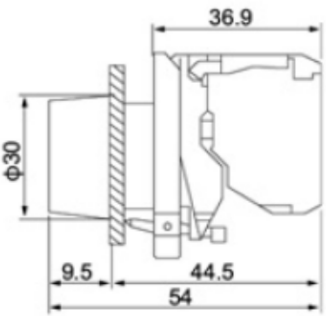 
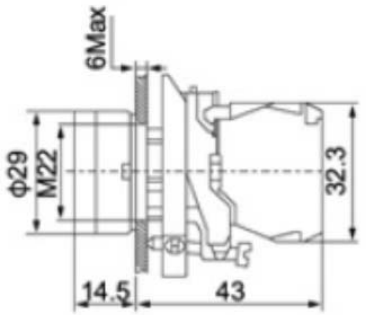 
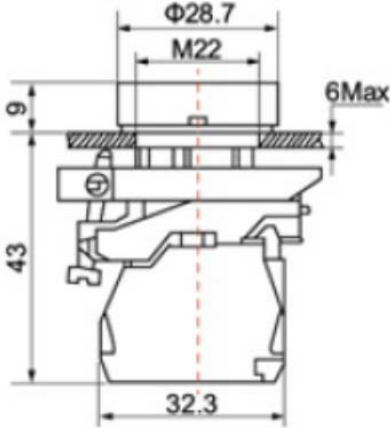 
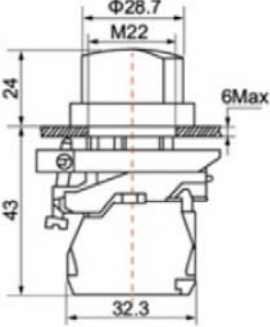 
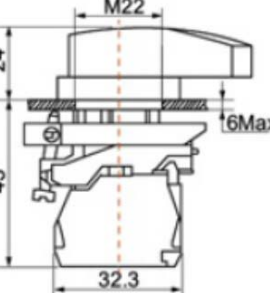 


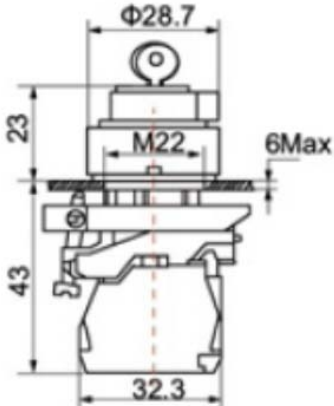 
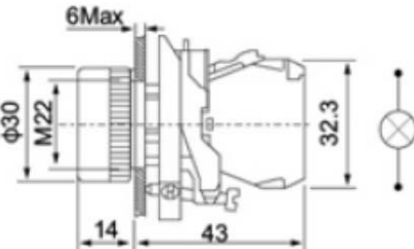 
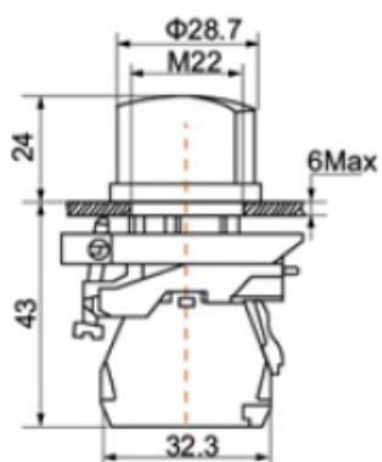 
YDS-XB4 Push-button switch and indicator

Picture	Product name	Model	Color	Contact type		Structure drawing
	Flat push button switch	XB4-BA11	White	1	-	
		XB4-BA21	Black	1	-	
		XB4-BA31	Green	1	-	
		XB4-BA51	Yellow	1	-	
		XB4-BA61	Blue	1	-	
		XB4-BA42	Red	-	1	
		XB4-BA25	Black	1	1	
		XB4-BA35	Green	1	1	
		XB4-BA45	Red	1	1	
	Extended push button switch	XB4-BL31	Green	1	-	
		XB4-BL35	Green	1	1	
		XB4-BL42	Red	-	1	
		XB4-BL45	Red	1	1	
		XB4-BL11	White	1	-	
		XB4-BL21	Black	1	-	
		XB4-BL61	Blue	1	-	
		XB4-BL51	Yellow	1	-	
	Push button with waterproof cover switch	XB4-BP21	Black	1	-	
		XB4-BP31	Green	1	-	
		XB4-BP51	Yellow	1	-	
		XB4-BP61	Blue	1	-	
		XB4-BP42	Red	-	1	
		XB4-BP35	Green	1	1	
		XB4-BP45	Red	1	1	
	Push button with light (include LED)	XB4-BW3161	White	1	-	
		XB4-BW3361	Green	1	-	
		XB4-BW3462	Red	-	1	
		XB4-BW3561	Yellow	1	-	
		XB4-BW3661	Blue	1	-	

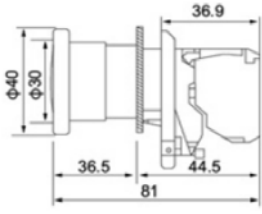 
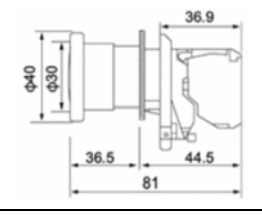 
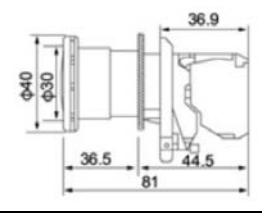 
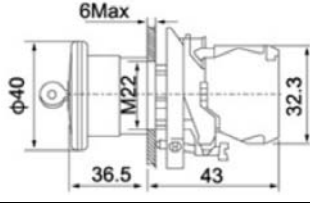 
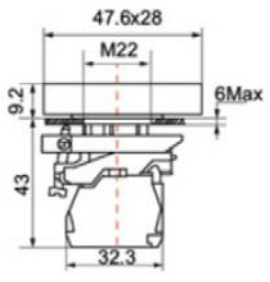 
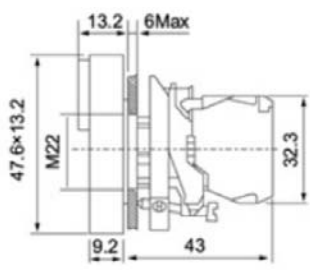 
YDS-XB4 Push-button switch and indicator

Picture	Product name	Model	Color	Contact type		Structure drawing
	Mark push button	XB4-EA31511 (3311)	 Green face single white vertical bar printing button	1	-	
		XB4-EA12511 (3341)	 White face black ↑	1	-	
		XB4-EA21511 (3351)	 Black face white ↑	1	-	
		XB4-EA41572 (4322)	 Printed button with black face and white arrow	-	1	
		XB4-EA41612 (4342)	 Red face STOP printing button	1	1	
		XB4-EA41575 (4325)	 Printed button with black face and white arrow	1	1	
		XB4-EA41615 (4345)	 Red face STOP printing button	1	1	
	2 Position select switch	XB4-BD21		1	-	
		XB4-BD25		1	1	
		XB4-BD41		1	-	
	3 Position select switch	XB4-BD45		1	1	
		XB4-BD33		2	-	
		XB4-BD53		2	-	
	2 Position with long handle	XB4-BJ21		1	-	
		XB4-BJ25		1	1	
		XB4-BJ41		1	-	
		XB4-BJ45		1	1	
	3 Position with long handle	XB4-BJ33		2	-	
		XB4-BJ53		2	-	

YDS-XB4 Push-button switch and indicator

Picture	Product name	Model	Color	Contact type		Structure drawing
	2 Position select switch with key	XB4-BG21		1	-	
		XB4-BG25		1	1	
		XB4-BG41		1	-	
		XB4-BG45		1	1	
		XB4-BG61		1	-	
		XB4-BG65		1	1	
	3 Position select switch with key	XB4-BG33		2	-	
		XB4-BG53		2	-	
	LED Indicator (include LED)	XB4-BV61	White	-	-	
		XB4-BV63	Green	-	-	
		XB4-BV64	Red	-	-	
		XB4-BV65	Yellow	-	-	
		XB4-BV66	Blue	-	-	
	Select switch with LED light (include LED)	XB4-BK2365	 Green	1	1	
		XB4-BK2465	 Red	1	1	
		XB4-BK2565	 Yellow	1	1	
		XB4-BK3365	 Green	1	1	
		XB4-BK3465	 Red	1	1	
		XB4-BK3565	 Yellow	1	1	

YDS-XB4 Push-button switch and indicator

Picture	Product name	Model	Color	Contact type		Structure drawing
	Mushroom head push button switch φ40mm	XB4-BC31	Green	1	-	
		XB4-BC42	Red	-	1	
		XB4-BC35	Green	1	1	
		XB4-BC45	Red	1	1	
	Push-pull push button switch φ40mm	XB4-BT42	Red	-	1	
		XB4-BT45		1	1	
	Emergency stop push button switch φ40mm	XB4-BS542	Red	-	1	
		XB4-BS545		1	1	
	(Ronis n° 455) Emergency stop push button with key φ40mm	XB4-BS142	Red	-	1	
		XB4-BS145		1	1	
	Double button switch	XB4-EW8325	 Green face single white bar, red face white circle	1	1	
		XB4-EW8425	 Green face single white bar, red face white circle	1	1	
	Square head double key push button switch with a light	XB4-EW8365	 Red face single white bar, Yellow, Green face white circle	1	1	
		XB4-EW8465	 Red face single white bar, Yellow, Green face white circle	1	1	