




PCI Express Card to 2 x Serial RS232

Model: ENIYOU-602PS

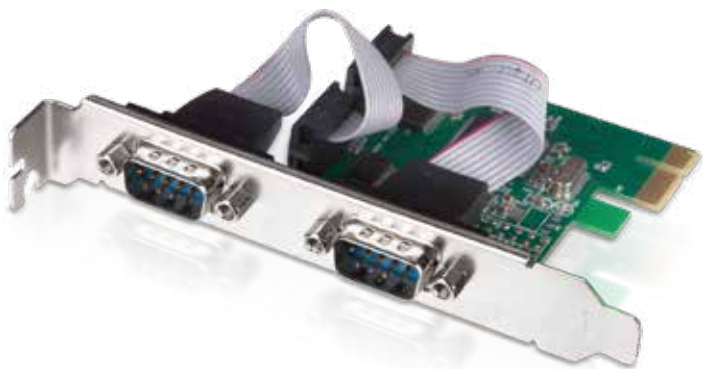

User Manual
www.eniyou.com

Description

The PCI Express card by Delock expands a PC by one external serial RS-232 port. Devices such as scanners, protocol converters, POS systems, infrared -, IoT - devices etc. and different modes can be used. By using the included low profile brackets, the PCI Express card can be also installed into a Mini-PC.

Specification

- Connectors:
 - 1 x serial RS-232 DB9 male
 - 1 x PCI Express Card
- Chipset: ASIX AX99100
- Compatible with 16C950 UART
- Supports Active State Power Management (ASPM)
- Supports Direct Memory Access (DMA)
- Modes
 - Supports slow IrDA mode up to 115 Kbps
 - Supports Multi-Drop 9-bit mode
- Data transfer rate up to 230.4 Kbps
- FIFO: 256 byte
- Databits: 5, 6, 7, 8, 9
- Stop bits: 1, 1.5, 2
- Parity: even, odd, none, mark, space
- Flow control: none, hardware RTS / CTS, software XON / XOFF
- Operating temperature: 0 °C ~ 55 °C
- Relative humidity: 10 - 90 %
- Dimensions (LxWxH): ca. 64 x 60 x 16 mm

System requirements

- Windows 7/7-64/8.1/8.1-64/10/10-64
- PC with one free PCI Express slot

Package content

- PCI Express card
- 1 x low profile bracket
- Driver CD
- User manual

Safety instructions

- Protect the product against moisture
- Avoid anti-static electricity when installing the card

Hardware Installation

1. Turn off your PC and unplug the power cord.
2. Open the housing.
3. Remove the slot holder from the available PCI Express slot.
4. Insert the card straight and carefully into the free PCI Express slot, until it is well seated.
5. Use a screw to attach the card to the housing.
6. Reattach the housing and connect the power cord to the AC adapter.
7. Switch on your computer.

Driver Installation

1. Switch on your computer.
2. The assistant for the Software Installation will appear. Click on "Cancel".
3. Put the driver CD in the CD ROM drive.
4. Navigate to the appropriate folder of your operating system under CD-drive\602PS\AX99100 driver\ Windows and choose "AX99100_Setup.exe".
5. Follow the instructions of the driver installation.
6. Restart the computer under Windows after installation of the driver.
7. After restart you can start using the device immediately.

Support Delock

If you have further questions, please contact our customer support support@delock.de

You can find current product information on our homepage: www.delock.com

Final clause

Information and data contained in this manual are subject to change without notice in advance. Errors and misprints excepted.

Copyright

No part of this user manual may be reproduced, or transmitted for any purpose, regardless in which way or by any means, electronically or mechanically, without explicit written approval of Delock.

