

WOODEN CLOCK INSTRUCTION (upgrade version)

1:Features:


- ◆ Display mode: DP-1: Time, date, temperature automatically take turns display
DP-2: only Time
- ◆ Calendar: 2000-2099 years
- ◆ 12/24 hour format selectable: (initial mode:24-hour;january 1 2014;12:00 clock)
- ◆ Every time can set up three groups of alarm, Each alarm 1 minute Sound are: bi bi bi ...
- ◆ 18:00-07:00 half luminance; and three luminance to set (L1—L2—L3)
- ◆ DC5V/500MA power supply by USB; (or 3*AAA or 4*AAA; Sound control function is recommended ON, when batteries used);built-in battery keeping Time display program running inside but invisible outside
- ◆ Sound control mode (Power-saving mode)

2: Packing list: please kindly check all the details below when open the packing:

- ◆ digital wooden clock 1pcs
- ◆ user's manual 1pcs
- ◆ USB charging cable 1pcs


3.Display and keys:

SET
DP-1↔DP-2

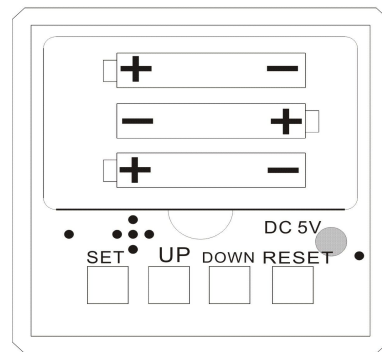


A 3*AAA



UP
°C ↔ °F
DOWN
ON: SD ↔ ---: SD

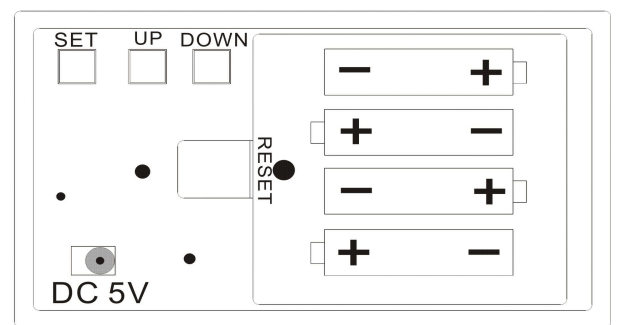

B 4*AAA

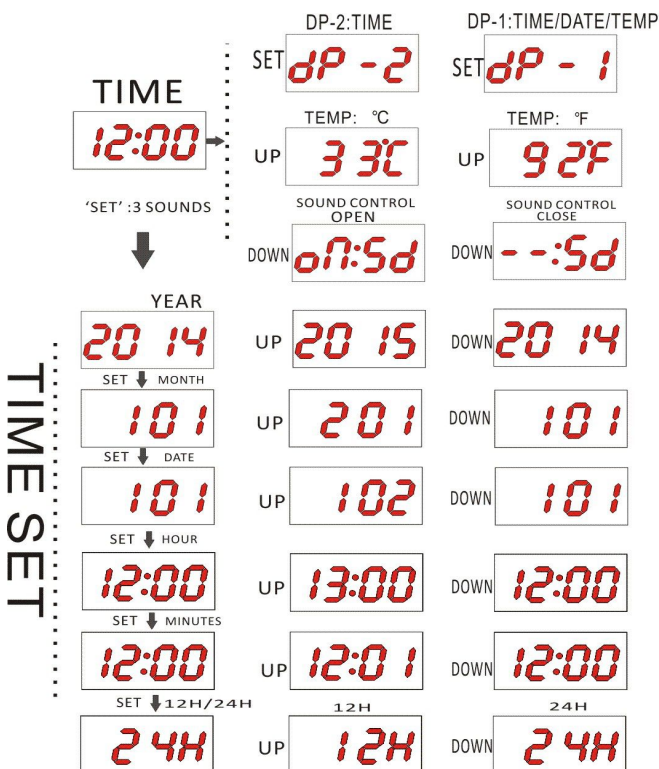

ALARM SET

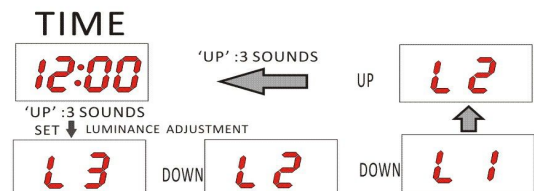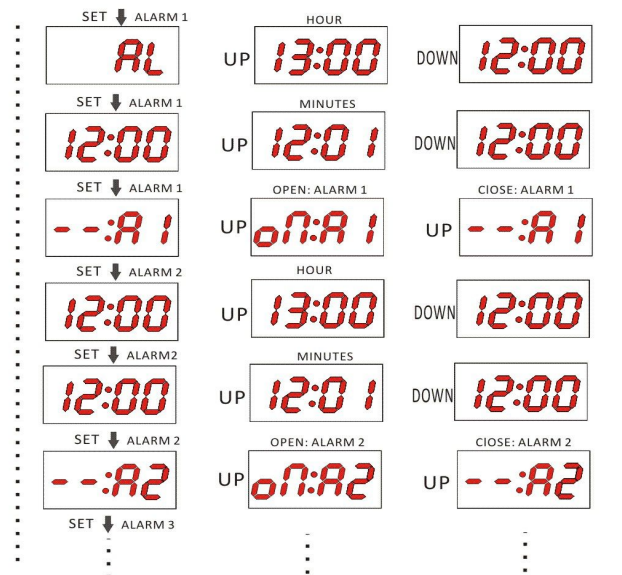

LUMINANCE SET

1). Display mode select: DP-1/DP-2

initial mode: DP1; press 'SET' to transform DP1 ↔ DP2)

2). Sound control mode select (Power-saving mode on AAA battery) :

Press 'DOWN', "on: SD" ↔ "—:SD"; "ON: SD" means sound control works; "--:SD" means sound control closed

3).press "up"; °C ↔ °F format Conversion

4). Press button "SET"for 3seconds to enter into setting mode,

You may set :YEAR→MONTH→DATE→HOUR→MINUTE→12H/24H→AL(ALARM)→ALA1→ALA2→ALA3

When YEAR symbol flashing, adjust by"UP"and"DOWN";

...

5). 12 hour format display; "PM" light is open

6). Display luminance adjustment

Press and hold the 'UP' key for 3 seconds to enter the setting item. Display "L3".Press DWON key luminance decreases Display "L2",Press UP luminance enhancement, four levels of L3-0. After setting holding down the 'UP' key for 3 seconds exit setup

7) Button "RESET"

◆Any mistake or badness caused by improper operation could By renewed by button "RESET"

4. Precautions:

◆Please use the clock in dry area, due to all wooden housing, as it can not last long in wet, tremble, high temperature or temperature keeping changing area.

◆Keep dropping down from floors, in case there is any broken.

◆Please use high quality AA alkaline batteries. If the brightness dim or blinking, it means low battery, please change in time, in case battery solution leaking.

When no power, please check if there are batteries inside to keep it working properly.

◆5V/500MA-1000MA AC adapter is applicable to the clock, please choose the compatible one.