 
 


MMCX R/A MALE TO MMCX R/A MALE CABLE ASSEMBLY

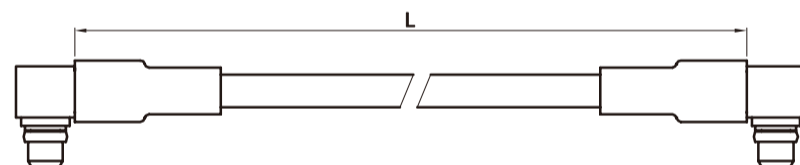


CONNECTOR A	CABLE	CONNECTOR B	Frequency range	Return loss
FS48.15.00	.085	FS48.15.00	0-6 GHz	-17 dB max

N ST MALE TO N ST MALE CABLE ASSEMBLY

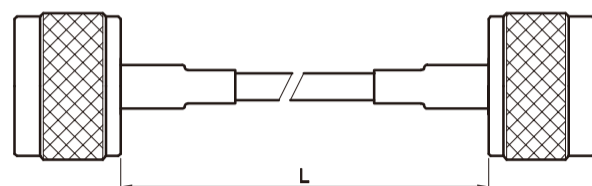


CONNECTOR A	CABLE	CONNECTOR B	Frequency range	Return loss
FS41.145.00b	2.6/50s	FS41.145.00b	0-3 GHz	-17 dB max

 TNC R/A MALE TO TNC R/A MALE CABLE ASSEMBLY

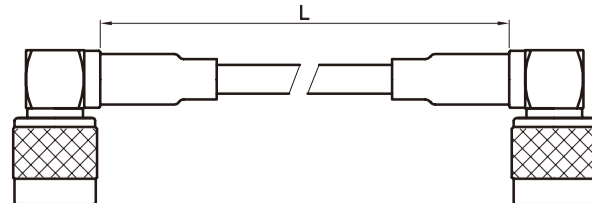

CONNECTOR A	CABLE	CONNECTOR B	Frequency range	Return loss
FS51.18.00	5/50s	FS51.18.00	0-3 GHz	-17 dB max

 SMA R/A MALE TO SMA R/A MALE CABLE ASSEMBLY

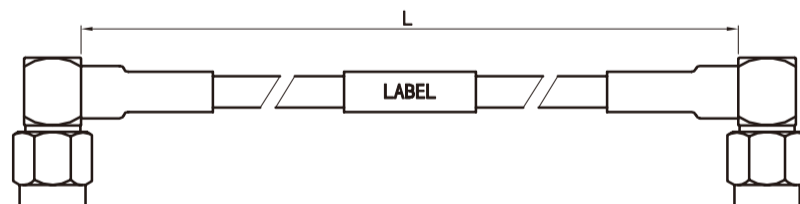


CONNECTOR A	CABLE	CONNECTOR B	Frequency range	Return loss
FS09.119.00b	.141	FS09.119.00b	0-3 GHz	-24 dB max

MCX ST MALE TO MCX ST MALE CABLE ASSEMBLY




CONNECTOR A	CABLE	CONNECTOR B	Frequency range	Return loss
FS47.44.00	2.6/50S	FS47.44.00	0-6 GHz	-15 dB max

 SMA ST MALE TO SMA R/A MALE CABLE ASSEMBLY

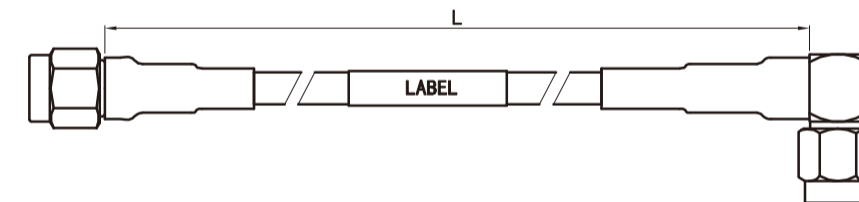


CONNECTOR A	CABLE	CONNECTOR B	Frequency range	Return loss
FS09.229.00	.141	FS09.119.00	0-6 GHz	-15 dB max

 MCX R/A MALE TO MCX R/A MALE CABLE ASSEMBLY

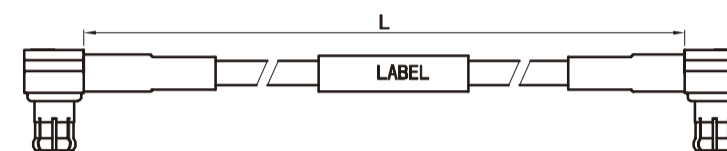


CONNECTOR A	CABLE	CONNECTOR B	Frequency range	Return loss
FS47.28.00	.085	FS47.28.00	0-6 GHz	-15 dB max

 MMCX R/A MALE TO MMCX ST MALE CABLE ASSEMBLY

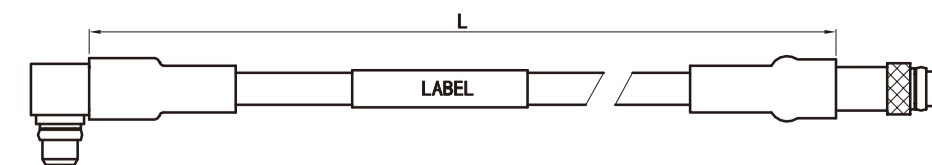


CONNECTOR A	CABLE	CONNECTOR B	Frequency range	Return loss
FS48.15.00	.085	FS48.27.00	0-6 GHz	-17 dB max

 N R/A MALE TO N ST MALE CABLE ASSEMBLY

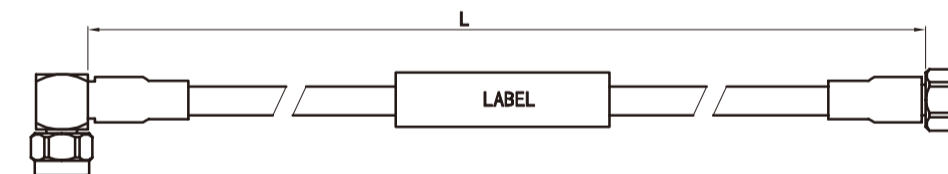

CONNECTOR A	CABLE	CONNECTOR B	Frequency range	Return loss
FS41.377.00	LMR 400	FS41.69.00	0-6 GHz	-17 dB max

 SMA R/A MALE TO SMA ST FEMALE CABLE ASSEMBLY

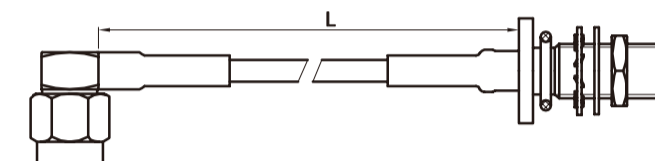

CONNECTOR A	CABLE	CONNECTOR B	Frequency range	Return loss
FS09.223.00	.085	FS09.253.00	0-9 GHz	-17 dB max