



Shenzhen SAKO Electronic Co.,Ltd.

www.sakoglobal.com

Email:Rong@sakoglobal.com Tel:+86 755 2902 8511

Address:601, D Blk, Bantian International Center, Longgang District, Shenzhen, China. 518000

		ISHAKO S-PS422 Program PS4 Controller	
		1. Compatible with PS4/PS4 Pro/PS4 Slim/, PS3, PC 2. Wireless connection 3. Buttons : Option, Share, L3, R3, Triangle, Square, Circle, Cross, Right, Left, Up, Down, L1, L2, R1, R2, Mn Keys 4. Wireless PS4 controller has built in two electronic motors, built-in speaker, touch pad, six-axis, smart light bar, share button functions. All the functions offer exciting experience and interact with your games 7. Design for FTG game	
Specification		Feature	
Compatible Platform	PS4, PS3,PC	Sixaxis:	Y
Voltage	DC3.7V	Screenshoot:	Y
Current	30mAh	Share:	Y
Input power rating	DC5V/500MA	Turbo:	Supported, need to macro
Operating distance	<=8M	LED Lights:LED	Y
Auto sleep Mode	5mins without operation	Dual Vibration:	Y
Usage time	4-5H	NFC:	N
Battery capacity	600mAh	Touch-PAD:	Y
Battery charging time	1-2H	Mic:	Y
Battery Type	Built-in rechargeable Lithium-ion battery	Remap:	Y
		Macro:	Y
Package			
Size:	16*10.3*5.7 cm	N.W.:	220g
Retail Package		Whosale Package	
Box Size:	18*12.5*7.5cm	Carton Size:	62*37*36 cm
G.W.:	0.35KG	Inner package	1set/box ,50sets/carton
Inner package	1 M charging cable 1*User manual 1* game controller	G.W.:	19.5KG
Product Image			
			

Note:For more details of ISHAKO S-PS422 game controller,Please reference to the user manual or contact us at cs@sakoglobal.com

Form:SK20190525-PS4221

Instructions of S-PS422

1. Macro Remap is a new functionality available on PS4 Controllers that lets the user utilize repeatable and continued button presses in the game via simple macros.

2. Macro Remap is not a game-specific feature, which can be used in any games. It is highly suggested that they should be used for playing the fighting games.

3. This controller has 4 programmable paddles named Mn keys (M1, M2, M3, M4) which enables user to assign the stock buttons functionality into the Mn keys on the fly.

4. Stock buttons can be assigned to Mn buttons: L3, R3, A, B, X, Y, Right, Left, Up, Down, L1, L2, R1, R2.

5. Factory Default: M1, M2, M3, M4 = A, B, X, Y

6. There is Red Led Indicator on the back, it will flash when in program process.

1. How to register/pair the controller?

1> The first time you use the controller, or when you want to use the controller on another PS4 system, you must perform device registration/ pairing. Turn on the PS4 console system and connect the controller to the system. Use the USB cable to complete device registration.

2>. After first time connected, wireless function will auto connect.

3>. For BT enabled PC connection, press "Share" and "Home" buttons before pairing. For no BT function PC, use a Bluetooth adapter. USB cable wired connection to play PC games or play games on steam.

2. How to turn on/off

The PS4 controller will start when you press the HOME button or connect with computer by USB cable. If it cannot stop working after a long time, please plug the USB cable in computer then pull it out, thus it will be power off.

3. How to Charge the controller?

Connect the controller by a USB cable.

When charging, the light bar will be flashing; When fully charged, the light bar turns off.

4. How to set up the Single Remap Function

A. When connected with the console successfully, press the Share+Mn button at the same time, then the Red LED indicator will flash.

B. Press the stock button that needs to be assigned (e.g. L2 Button), then the Red LED indicator will flash.

C. Hold down any Mn button (e.g. M1 button), to configure stock button

5. How to set up the combined Remap function

A. When connected with the console successfully, press the Share+Mn button at the same time, then the Red LED indicator will flash.

B. Press the buttons that need to be assigned (e.g. A+B+X button), then the Red LED indicator flash.

C. Press any Mn button (e.g. M2 button), to configured combined functions of the buttons A, B and X.

6. How to turn off the remap function

A. Press Option+Mn button, then the Red LED indicator will flash.

B. Press Mn button that needs to be turned off.

7. How to set up the Double-Tap, Triple-Tap, Continuous Press.

A. When connected with the console successfully, press the Option+Mn at the same time, then the Red LED indicator flash.

B. Press the buttons that needs to be assigned in sequence (e.g. A→B→X→Y), then the Red LED indicator will flash.

C. Press any Mn button (e.g. M3 button), to configure a programmed period of time.

8. How to turn off the Macro function

A. Hold down OPTION+Mn button, then the Red LED indicator flash.

B. Press Mn button that needs to be turned off.

Note: For more details of ISHAKO S-PS422 game controller, Please reference to the user manual or contact us at cs@sakoglobal.com

Form: SK20190525-PS4221