

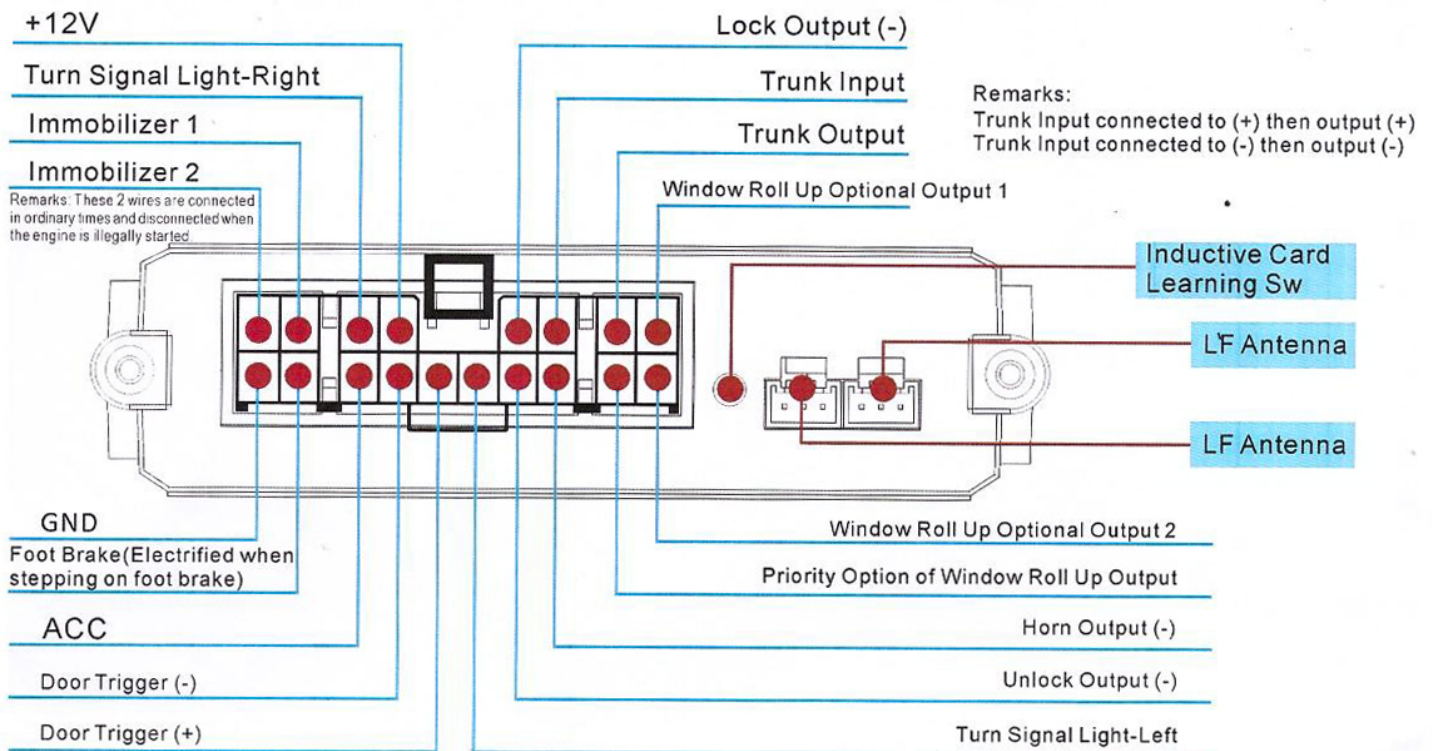


3200 UNIVERSAL PKE Installation Instructions

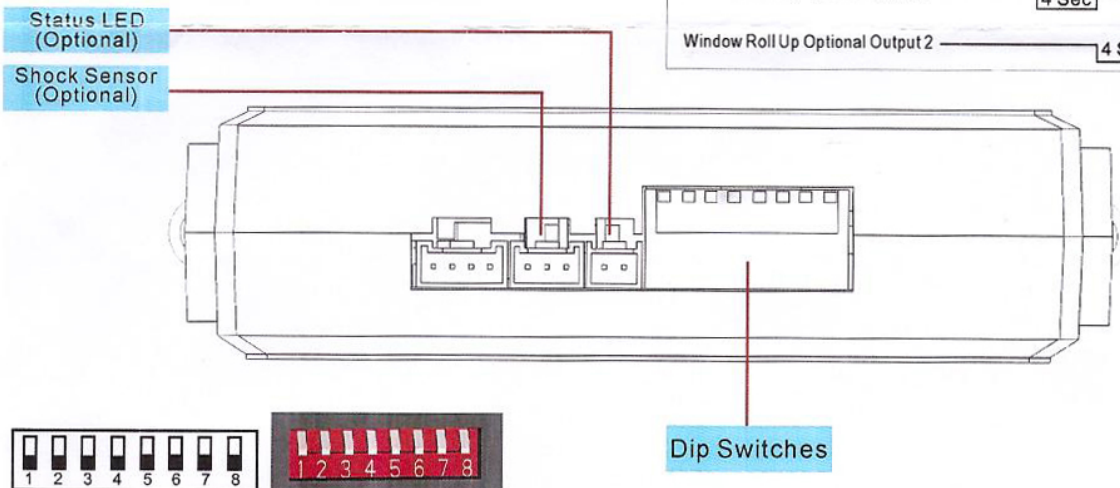

Window Roll Up Neg. Output Options:

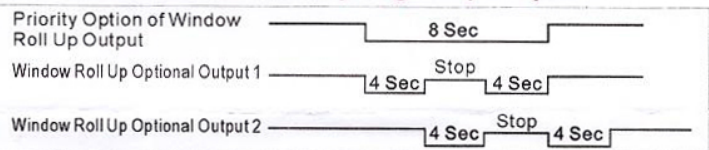

Definition of the Dip Switches:

- SW 1: Up-Without Dome Light Delay; Down-With Dome light delay
- SW 2: Up-Normal Mode; Down-Silent Mode
- SW 3: Up-Unlock once; Down-Unlock twice
- SW 4: Up-Doors will lock when braking; Down-Doors will not lock when braking
- SW 5: Up-Car Horn; Down-Siren
- SW 6: Up- Enable ignition trigger alarming; Down-Disable ignition trigger alarming
- SW 7: Up- Lights flash when door opened; Down- Lights will not flash when door opened
- SW 8: Not used

Inductive Card Learning Sw.

Inductive Card Learning Process: Press and hold the learning switch for 5 sec, the horn will chirp once, the turn signal lights will light solid. Press the button of the Inductive Card to be learnt at this time, the horn will chirp once, indicating successful learning.

Installation Position

Stick on the front windshield on horizon and away from metal as far as possible.

Stick on the rear windshield or the inner side of the rear lamp or bumper and away from metal as far as possible.

