


SPECIFICATION AND USER MANUAL

Model Name: **798 wired keyboard 98-keys+1Knob**

Product Picture

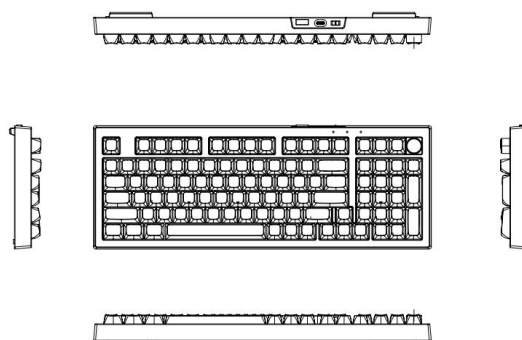

Category	Details	Standard	Details	Standard
BASE SPECIFICATION	Keyboard Type	Membrane Keyboard	Layout Version	EN/US/UK/ES/TR
	Interface Type	USB Detachable	Size (L * W * H)	392.7 (L) ×144.15 (W) ×35.31 (H) ±1mm
	Connection Mode	Wired	N.W	711g
	Multimedia Function Key	Support	Cable	Type C wired Rechargeable
	Working Voltage	DC 5V	Cable Color	Black or White
	Working current		Interface Compatibility	USB1.1 later port
	Key Resilience	65 ± 10 g	System Compatibility	All Windows operating systems WIN XP, WIN7,WIN8,WIN10 (In Win95, Win98 systems, drivers may be required)
	Key Life	10 million times	Backlight Color	RGB
	Backlight	Support	Backlit Breathing Light	No
	Backlight Control Key	Yes	Wave Lighting	No
	ESD Test	Passed		

	Editable Software		No	Ergonomic	Yes
	Support Plug and Play		Support	Letter Printing	Laser print
	IC CORE		6228	Working Current	< 50 mA
	Working Humidity		10%~90% RH 25°C	Storage Humidity	5%~95% RH 25°C
	Storage Temperature		-20°C~65°C	Working Temperature	5°C~50°C
	Aesthetic Seam Test		Seam between the top cover and bottom cover: 0.2 ± 0.1 mm.		
	Keyboard Noise Test:		Measured at a distance of 420 ± 10 mm, noise level ≤ 90 dB.		
Selling Points	1	No USB driver is required for plug and play			
	2	FN function			
	3	Comfortable & delicate touch feeling			
	4	Not greasy after long Use/Quite typing /Quick response			
	5	FN+Pgup Increase Brightness of the LED light FN+Pgdn Decrease Brightness of the LED light			
	6	Fashionable, designed colors, mysterious color			
	7	Abs materials ,not easy to break,super durable			
	8	Different layer key cap design,Ergonomic			
	9	26 keys Anti-ghosting			
Material specification parameter					
Spare Part		Color	Material	Surface Treatment	
Cover		White	ABS	-	
Bottom		White	ABS	-	
Key caps		White&blue	ABS	-	
Aluminum Plate		Silver			
Two-stage Adjustable Feet					
Foot pad			Silicone		

KEY COMBINATION	
FN+F1	Media Player
FN+F2	Volume-
FN+F3	Volume+
FN+F4	Mute
FN+F5	Previous Track
FN+F6	Next Track
FN+F7	Play/Pause
FN+F8	Stop
FN+F9	Homepage
FN+F10	E-Mail
FN+F11	My Computer
FN+F12	Lock Computer
FN+ ↑	Increase brightness (levels: 0% → 25% → 50% → 75% → 100%). When set to maximum brightness, t times.
FN+ ↓	Decrease brightness (levels: 100% → 75% → 50% → 25% → 0%). When set to minimum brightness, times.
FN + Left Win	Lock or unlock the Left Win key or App key
26 keys Anti-Ghosting	
Tap、Caps、X、 F、 Shift-L、 Ctrl-L、 Alt-L、 G、 M、 T、 ↑、 ↓、 ←、 →、 W、 A、 S、 D、 Q、 B、 V、 R、 E、 Z、 C、 Space	