


SPECIFICATION AND USER MANUAL

Model Name: **787 wired keyboard**

Keys:78keys


Product Picture

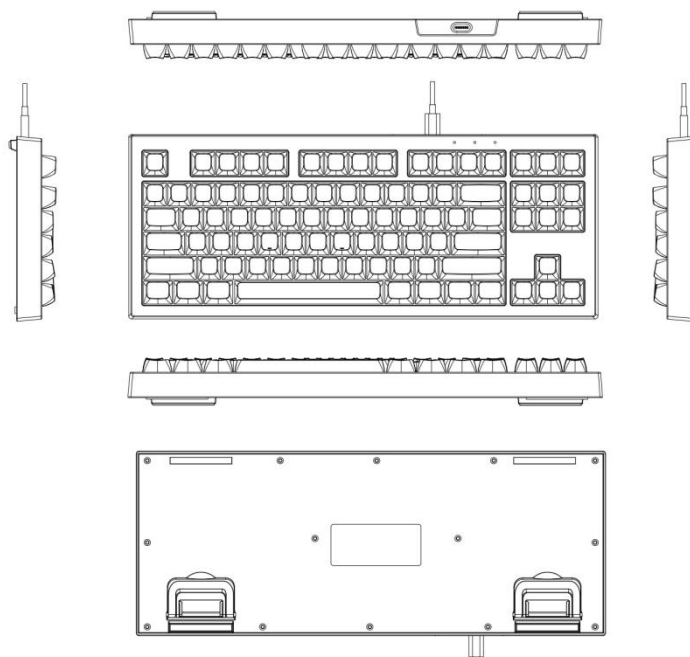

Category	Details	Standard	Details	Standard
BASE SPECIFICATION	Keyboard Type	Membrane Keyboard	Layout Version	EN /US/UK/ES/TR
	Interface Type	USB Detachable	Size (L * W * H)	365.34 × 143.50 × 35.31 ± 1mm
	Connection Mode	Wired	N.W	635g
	Multimedia Function Key	Support	Cable	Type C wired Rechargeable
	Working Voltage	DC 5V	Cable Color	Black or White
	Key Material	ABS	Interface Compatibility	USB1.1 later port
	Key Resilience	60 ± 10 g	System Compatibility	All Windows operating systems WIN XP, WIN7,WIN8,WIN10 (In Win95, Win98 systems, drivers may be required)
	Key Life	10 million times	Backlight Color	Rainbow
	Backlight	Support	Backlit Breathing Light	No

	Backlight Control Key		Yes	Wave Lighting	No
	ESD Test		Passed		
	Editable Software		No	Ergonomic	Yes
	Support Plug and Play		Support	Letter Printing	Laser print
	IC Core		HCT-PX787-KB8574 V02	Working Current	< 50 mA
	Working Humidity		10%~90% RH 25°C	Storage Humidity	5%~95% RH 25°C
	Storage Temperature		-20°C~65°C	Working Temperature	5°C~50°C
	Aesthetic Seam Test		Seam between the top cover and bottom cover: 0.2 ± 0.1 mm.		
	Keyboard Noise Test:		Measured at a distance of 420 ± 10 mm, noise level ≤ 90 dB.		
Selling Points	1	No USB driver is required for plug and play			
	2	FN function			
	3	Comfortable & delicate touch feeling			
	4	Not greasy after long Use/Quite typing /Quick response			
	5	FN+Pgup Increase Brightness of the LED light FN+PgUP Decrease Brightness of the LED light			
	6	Fashionable, designed colors, mysterious color			
	7	Abs materials ,not easy to break,super durable			
	8	Different layer key cap design,Ergonomic			
	9	19 keys Anti-ghosting			
Material specification parameter					
Spare Part		Color	Material	Surface Treatment	
Cover		Black	ABS	-	
Bottom		Black	ABS	-	
Key caps		Black	ABS	-	
Aluminum Plate		Silver			
Two-stage Adjustable Feet					
Foot pad			Silicone		

Keyboard layout

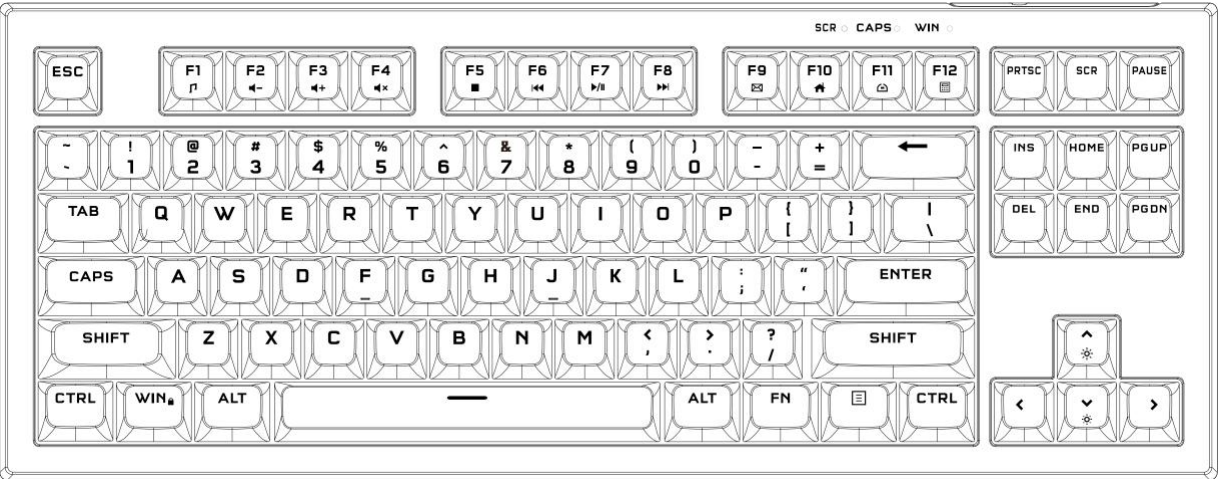

KEY COMBINATION	
FN+F1	Open the player
FN+F2	Volume-
FN+F3	Volume+
FN+F4	Mute
FN+F5	Stop
FN+F6	Previous song
FN+F7	Play/Pause
FN+F8	Next song
FN+F9	Mail
FN+F10	Homepage
FN+F11	Lock PC
FN+F12	Calculator
FN+ ↑	Increase brightness (levels: 0% → 25% → 50% → 75% → 100%). When set to maximum brightness, t times.
FN+ ↓	Decrease brightness (levels: 100% → 75% → 50% → 25% → 0%). When set to minimum brightness, times.
FN + Left Win	Lock or unlock the Left Win key or App key
19 keys Anti-Ghosting	
Q、A、Z、W、S、X、E、D、C、B、Space、↑、↓、←、→、Tab、Alt-L/V、Ctrl_L/F、Shift_L	