

Intelligent Vacuum Curing Film Applicator

An Instruction Manual

(Enclosed: intelligent vacuum film applicator 1, power adapter 1, instruction 1)

Please read the instruction manual carefully before using the product and keep it properly

| Safety Alert

① Kind Tips

Please read the following precautions carefully before use.

⚠ Precautions

1. Prohibit placing the device near fire and flammable materials;
2. Do not operate this device with wet hands;
3. Do not allow children to operate this equipment;
4. Do not use strong corrosive cleaning products for cleaning;
5. During use, it is forbidden to direct UV light to the eyes ;
6. Before use it, please check and ensure that the mobile phone is good . If the screen is broken, it cannot be used by machine;
7. Before operation, please ensure that there is no any matter in the lamination compartment;
8. It is normal for the surface of the product to have temperature during operation;
9. Do not force open the lid before the device is stopped during use;
10. If it will not be used for a long time, please unplug the power plug from the socket and protect it from moisture and dust. ;
11. Do not power off during use, otherwise it will affect the life of the product;
12. If force majeure causes the equipment to be powered off during the process, restart the reset after power on;


Please read the instruction manual carefully before using the product and keep it properly

| Product Introduction

Product Introduction

Product number	SM-2206	Product name	Intelligent vacuum curing film applicator
Fitting method	Vacuum bonding + UV curing	UV lamp wavelength/ quantity	395mm/24pcs
Rated voltage/ Rated current	12V/2A	Rated power	24W
Product size	(293* 177*96)mm	Product weight	1.43KG

Key Description

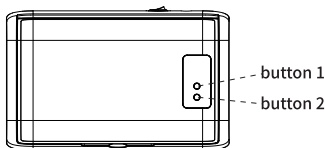





Button 1: vacuum for 25 seconds - UV light on for 120 seconds - exhaust for 5 seconds (for UV film)

Button 2: vacuum for 18 seconds - hold pressure for 5 seconds - exhaust for 5 seconds (for TPU hydrogel film)

Remark:

Double-click the button NO.1: when the lid needs to be opened during the operation, double-click the button NO.1 to open the solenoid valve switch and release the vacuum in the sealed chamber

Product display description

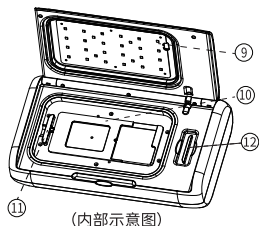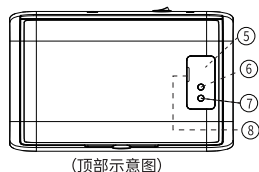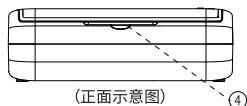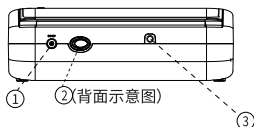

① power socket 3.5mm

② power

③ Power off vent

④ machine lid

⑤ display

⑥ Button 1:
UV curing

⑦ Button 2:
vacuum + pressure

⑧ UV indicator

⑨ UV lamp


⑩ Silicone pad

⑪ positioning tool

⑫ Tail plug placement bin

| Instructions

Steps

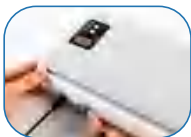

1. Insert the DC12V power cord and turn on the device




2. Open the lid of device



3. Insert the positioning tail into the mobile phone



4. Paste the cut film on the phone screen

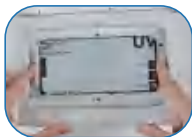

5. Put the phone and positioning tool in the machine



6. Press button 1 or button 2

Fault Description

Abnormal Situation	Possible Reason	Approach
The display light does not light up after the power is turned on	Loose plug/ poor electrical contact	Check the power connector or power switch is turned on or not
Power switch failed	Damaged power switch	Contact after-sales service to replace related parts
The film doesn't fit the phone after working	The vacuum silicone is loose and not closed properly	Re-closes in place to ensure a good seal
	Select button error	Reselect button
	Damaged silicone airbag skin	Replacing the silicone bladder
There is a big bubble in the middle of the screen after the machine work is done	Film has serrations cuts	Re-select films and do it all over again
	The angle of the scraper is wrong or the force is uneven	Use proper force and angle
After operation completed , there has small air bubbles in the corner area of the screen	Not fix the position tightly , Unequal force	Please place it tightly according to the tail plug mold and parallel to the phone pad, scrape the surface of the films with the same force.
After operation completed , there has small air bubbles in the middle of the screen	The dust was not cleaned up before operation. Or dust falls on the screen during operation	Clean the screen Carefully, reduce manual operation time.

After-sales service

After-sales service card (filled by user)

User name: _____ Tel: _____ Address: _____

Device model: _____ Purchase Date: _____ Problem: _____

Pledge

This product is guaranteed for one year from the date of sale.

After purchasing our products, please keep the invoice (paper or electronic invoice);

If the product is faulty, please contact the company's after-sales service center with a valid invoice or document.

Any of the following situations is not covered by the warranty:

1. Improper handling, use and maintenance by the user, surface damage, or man-made damage.
2. It is repaired at a point not designated by the company, or the customer installs and disassembles and repairs it by himself.
3. Damage caused by using a non-standard power adapter of our company.