
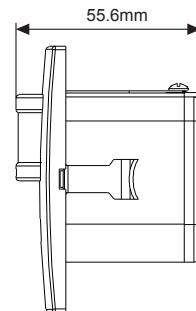


PD-PIR200 Infrared Motion Sensor Instruction

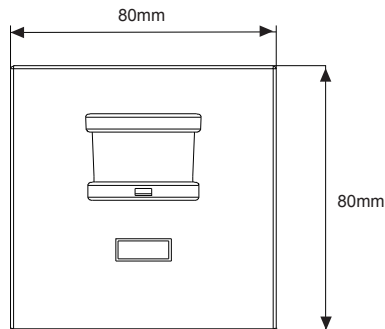

Summary



It is a new generation infrared sensor developed by our long-term market forecast and investigation. It has strong stability, it gathers multi-function, practical, good appearance, wide working voltage, convenient installation, detection indication, multi-working mode, etc. It adopts SMT technique. It is accorded with European standard, it is suitable for automatic control for home, hotel and enterprise.

Specifications


Power source: 100-240VAC
Power frequency: 50/60Hz
Rated load: 300W Max.(100-130VAC)
500W Max.(220-240VAC)
Installation height: 0.4m~1.8m
Detection angle: >140°
Light-control: 3LUX~1000LUX(adjustable)

Time setting: 5sec~7min±2min (adjustable)
Detection range: 12m Max (22°C)(adjustable)
Power consumption: 0.45W (static 0.1W)
Detection motion speed: 0.6~1.5m/s
Sound control sensitivity: 30db~90db(adjustable)
Working humidity: <93%RH
Working temperature: -10°C~+40°C

Sensor Information

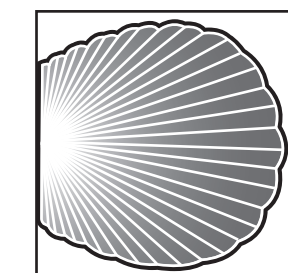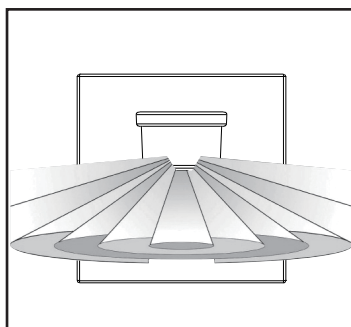

12m
Correct moving orientation

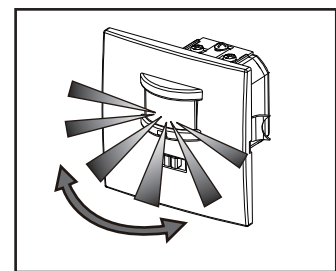

>140°
Detection angle


Function

- Multi-function: It has ON, OFF, light-control, high sensitive sound control, long distance, wide range infrared detection functions.
- Practicality: by the light-control it can control the sound-control and the ambient-light when the sensor works. It can work in various ambient-light day and night, it also can work only in low ambient-light; Time setting can be adjusted by yourselves in stipulated range; infrared induction and sound control sensitivity can be controlled by yourselves.
- Good appearance: The surface design is facility, comely but not losing generosity, the style is elegance, it will not have accidented feeling after installation.


- Wide working voltage: 100-240VAC 50/60Hz.
- Convenient installation: Two-installation modes for your selection. It can be installed in circular or quadrate junction box; you could fix the sensor with two screws on the junction box in circular one, also fix it with special installation shelf on sensor.
- Detection indication: The indicator lamp shines one time when it detects every time.
- Multi-working mode: You can select ON, OFF, infrared detection, infrared detection +sound control mode, if you select infrared detection + sound control mode, the lamp will be on automatically when you knock at the door or say "I am coming back" at night you come back home, it will make your home warmer and more romantic.

Installation

- Shut off the power.
- Loosen the connection column on the bottom of sensor, plug the wire into connection hole, tighten the screws.
- Unload the surface of sensor, connect the sensor into connection box.
- If you want to install it in quadrate connection box, penetrate the setscrew into installation hole, block on radiator to aim at the installation hole on connection box, then tighten the screw; if you want to install it in circular one, you can use the same way as the quadrate, also adjust the sensor's position, tighten the setscrew on surface, then the fixing arm will open automatically, fasten the connection box.
- Switch on the power then test it.

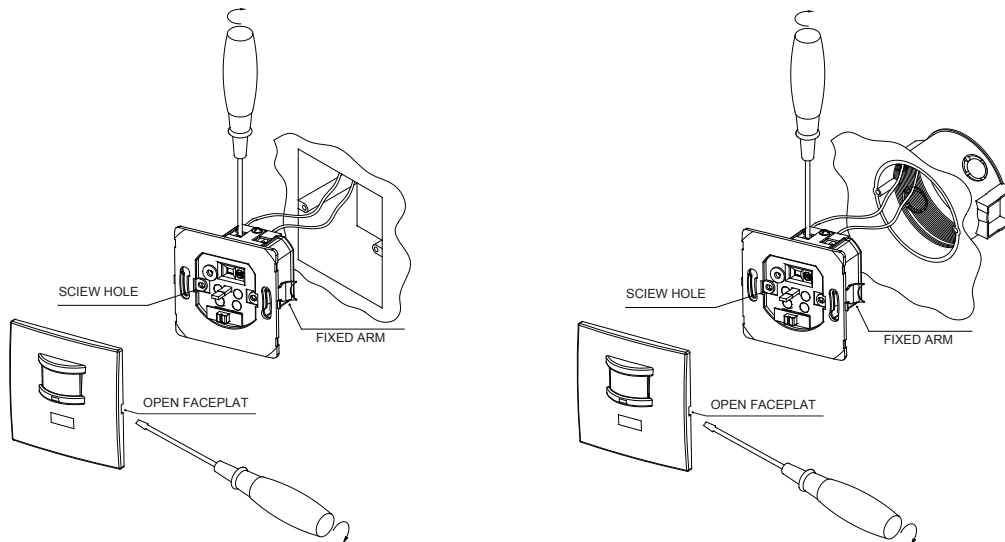


Connection-wire diagram

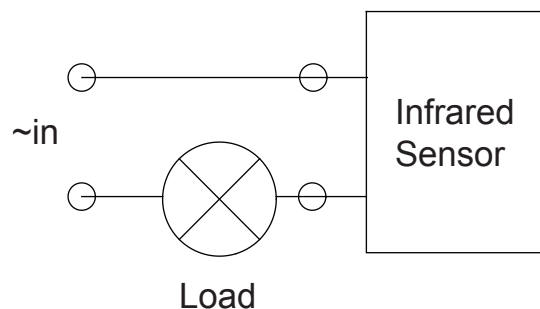

Test

- Set the function switch to "ON", set "SENS" to maximum, "MIC" to maximum; "LUX" to maximum; "TIME" to minimum;
- Switch on the power, the lamp should be on;
- Set the function switch to "OFF" after 30 sec, the lamp should be off, all functions should be in "stop" state;
- Set the function switch to "PIR" after 30sec, the inductor lamp will be on after 20sec when there is inductor signal whether the lamp is on or not. Under no inductor signal condition, the lamp should be off within 5~10sec, the lamp should be on again after 5sec. Set "LUX" to minimum, after it is off when there is no inductor signal condition, the lamp should be off in the daytime, but if you use a opaque object to cover sensor, the lamp should be on, then off within 5~10sec;

- Set the function switch to “+MIC”, “LUX” to maximum, then the sensor is in the infrared detection +sound control mode, cover the detector, if the lamp is on, under no inductor signal condition, the lamp should be off after 5~10sec, after 5sec if you clap your hands, the lamp should be on, then off after 5~10sec (no inductor signal).

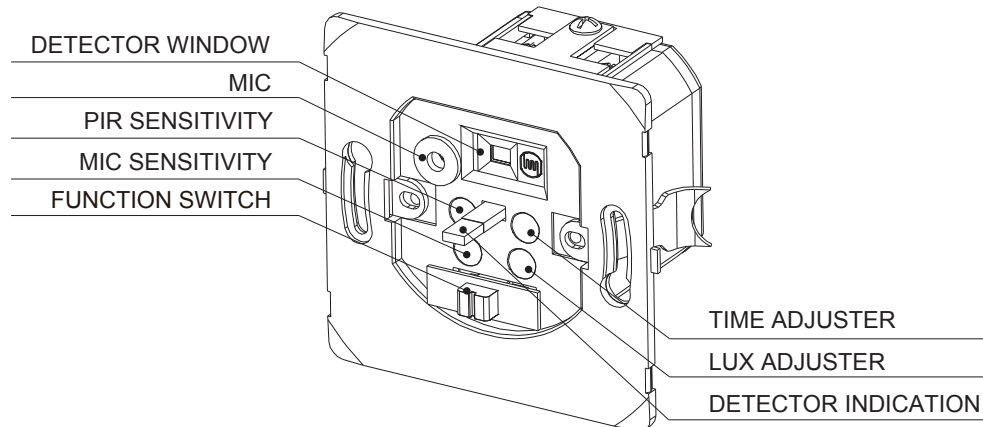

ATTENTION: When use this product, please adjust the sensitivity to an appropriate position you need, please do not adjust the sensitivity to maximum, to avoid the product does not work normally caused by wrong motion. Because the sensitivity is too high easily detect the wrong motion by wind blowing leaves & curtains, small animals, and the wrong motion by interference of power grid & electrical equipment. All those lead the product does not work normally !

When the product does not work normally, please try to lower the sensitivity appropriately, and then test it.

Note

- Let electrician or experienced human install it;
- The unrest objects can't be regarded as the installation basis-face;
- There should be no hinder or unrest objects effecting detection in front of the detection window;
- Avoid installing it near temperature alteration zones, for example, air condition, central heating etc;
- Don't open the case for your safety if you find the hitch after installation;
- If there is any difference between instruction and products, please give priority to product, sorry not to inform you again.

Warning

Any two-lined product could not be used at fluorescent lamp lonely. If you really want to connect it into fluorescent lamp, the fluorescent lamp must be mixed with incandescent lamp (load must be parallel connection).

DO NOT PUT THE SENSOR INTO POWER DIRECTLY!!!

Some problem and solved way

1、The load do not work:

- Please check if the connection-wiring of power and load is correct;
- Please check if the load is good ;
- Please check if the working light set correspond to light-control.

2、 The sensitivity is poor:

- a: Please check if there has hinder in front of the detection window to effect to receive the signal;
- b: Please check if the ambient temperature is too high;
- c: Please check if the induction signal source is in the detection fields;
- d: Please check if the installation height corresponds to the height showed in the instruction;
- e: Please check if the moving orientation is correct.

3、 The sensor can not shut off the load automatically:

- a: Please check if there is continual signal in the detection field;
- b: Please check if the time setting is the longest;
- c: Please check if the power correspond to the instruction;
- d: Please check if the temperature near the sensor change obviously, such as air condition or central heating etc.



Warning!

- Please confirm with preffessional installation.
- Please cut off power supply before installation and removal operations.
- Make sure that you have cut off the power for safety purposes.
- Improper operation caused losses, the manufacturer does not undertake any responsibility.

We are committed to promoting the product quality and reliability, however, all the electronic components have certain probabilities to become ineffective, which will cause some troubles. When designing, we have paid attention to redundant designs and adopted safety quota to avoid any troubles.

This instruction, without our permission, should not be copied for any other purposes.