


HDMI Extender over Ethernet

MODEL: SX-EX23

Operating Instructions

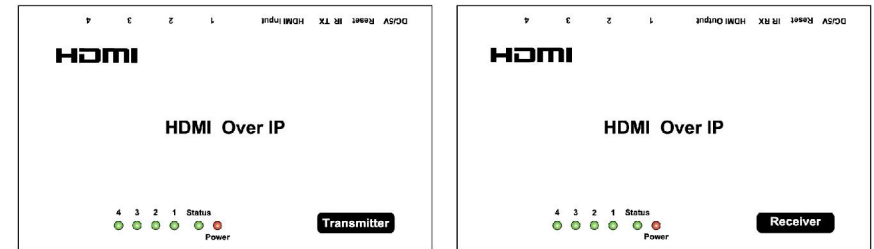

Dear Customer

Thank you for purchasing this product. For optimum performance and safety, please read these instructions carefully before connecting, operating or adjusting this product. Please keep this manual for future reference.

FEATURES

- I Flexible and scalable HDMI 1080p High Quality Video Broadcasting with Gigabit Ethernet LAN.
- I Extends 1080p HDMI signals up to 120m over a single UTP Cat5e/6 cable.
- I Multicasting and broadcasting architecture, adding more displays without adding LAN bandwidth loading.
- I Support Point-to-Point, Point-to-Many and Many-to-Many network configuration.
- I Support cascading Ethernet Switches up to 3 layers.
- I Extend, split, and daisy-chain HDMI, IR using CAT-5e cables
- I HDCP compliant

NOTICE

Our company reserve the right to make changes in the hardware, packaging and any accompanying documentation without prior written notice.

TABLE OF CONTENTS

- Specifications
- Package Contents
- Panel Descriptions
- Connecting and Operating
- Typical Application
- Maintenance
- Product Service
- Warranty

SPECIFICATIONS

Operating Temperature Range	-5 to +35 (+23 to +95)
Operating Humidity Range	5 to 90%RH (No Condensation)
Support Video Format	DTV/HDTV:480i/576i/480P/576P/720P/1080i/1080P
Output Video	HDMI,HDCP
Audio Sampling rate	32kHz, 44.1kHz and 48kHz
Transmission Distance	1080P @60Hz120m(Maximum) over single CAT5E/6 /24AWG/Solid
Power consumption	5V/2A DC ,Power consumption: Max. W
Dimension (L×W×H)	L145xW85x28mm
IR frequency range	38kHz
Net Weight	Receiver:340g,Transmitter:340g
TX&RX	Default IP address:192.168.168.55;MAC address:00:0b:78:00:60:01 Default IP address:192.168.168.56;MAC address:00:0b:78:00:60:02

Note1: Specifications are subject to change without notice. Mass and dimensions are approximate.

Note2:one TX to many RX or many TX connect to many RX, IP and MAC address must be different.

PACKING CONTENTS

- 1) Main Unit. Transmitter & Receiver HDMI Extender
- 2) Power adapter DC 5V 2Ax2PCS
- 3) IR-TX cable&IR-RX cable
- 4) Operating Instructions

MAINTENANCE

Clean this unit with a soft, dry cloth. Never use alcohol, paint thinner or benzene to clean this unit.

PRODUCT SERVICE

1) **Damage requiring service:** The unit should be serviced by qualified service personnel if:


- (a)The DC power supply cord or AC adaptor has been damaged;
- (b)Objects or liquids have gotten into the unit;
- (c)The unit has been exposed to rain;
- (d)The unit does not operate normally or exhibits a marked change in performance;
- (e)The unit has been dropped or the cabinet damaged.

2) **Servicing Personnel:** Do not attempt to service the unit beyond that described in these operating instructions. Refer all other servicing to authorized servicing personnel.


3) **Replacement parts:** When parts need replacing ensure the servicer uses parts specified by the manufacturer or parts that have the same characteristics as the original parts. Unauthorized substitutes may result in fire, electric shock, or other hazards.

4) **Safety check:** After repairs or service, ask the servicer to perform safety checks to confirm that the unit is in proper working condition.

One to more(B)

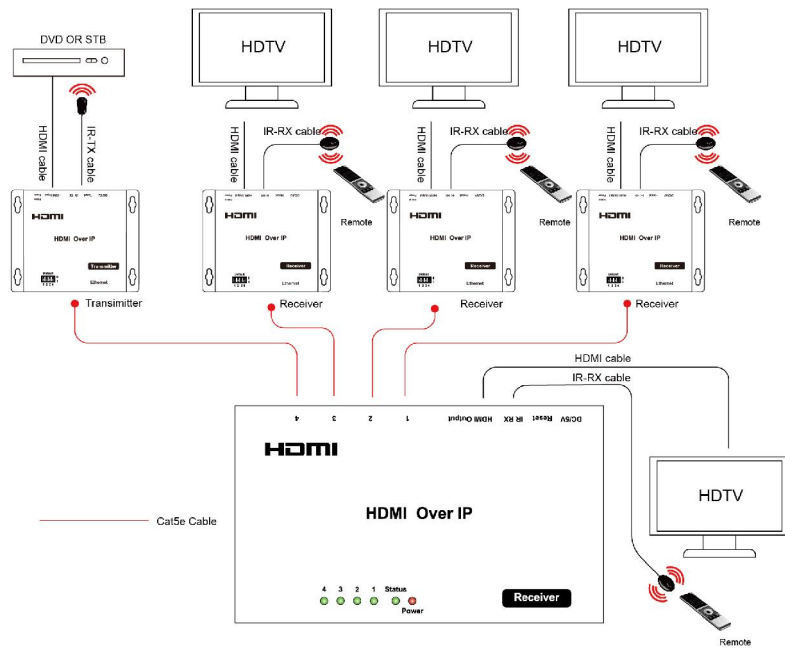


PANEL DESCRIPTIONS

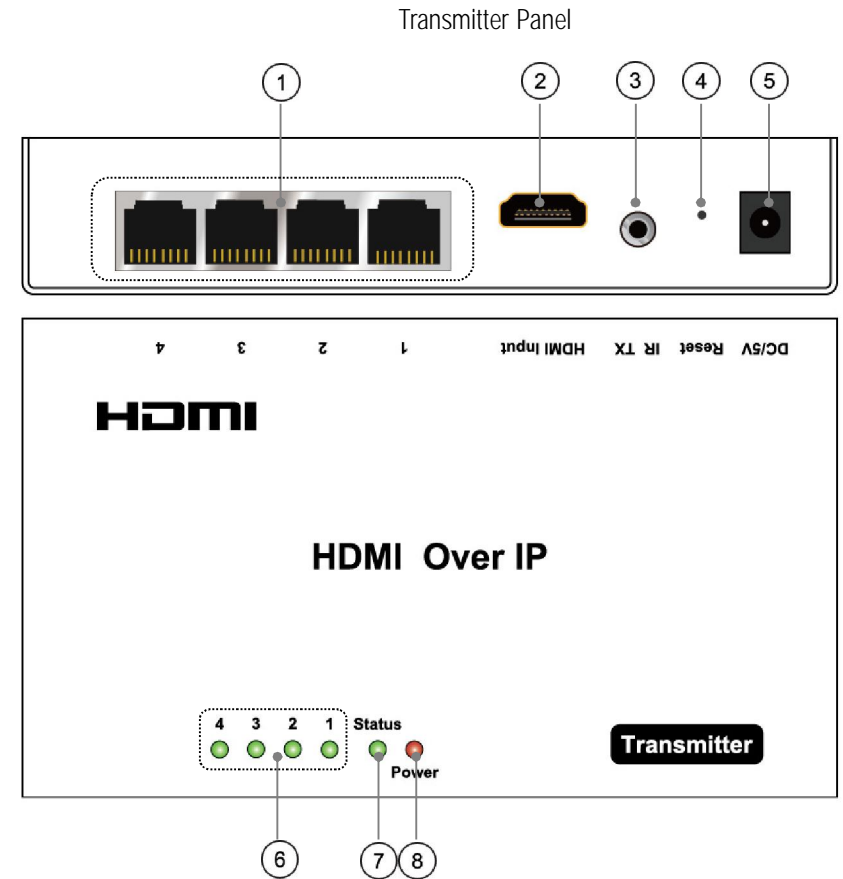

- | | | |
|--------------------------|--------------------------|---------------------------|
| Link ports | HDMI input | IR-TX port |
| Reset button | Power input port | Status of Link connection |
| Status of device running | Indicator of power input | |

Receiver Panel

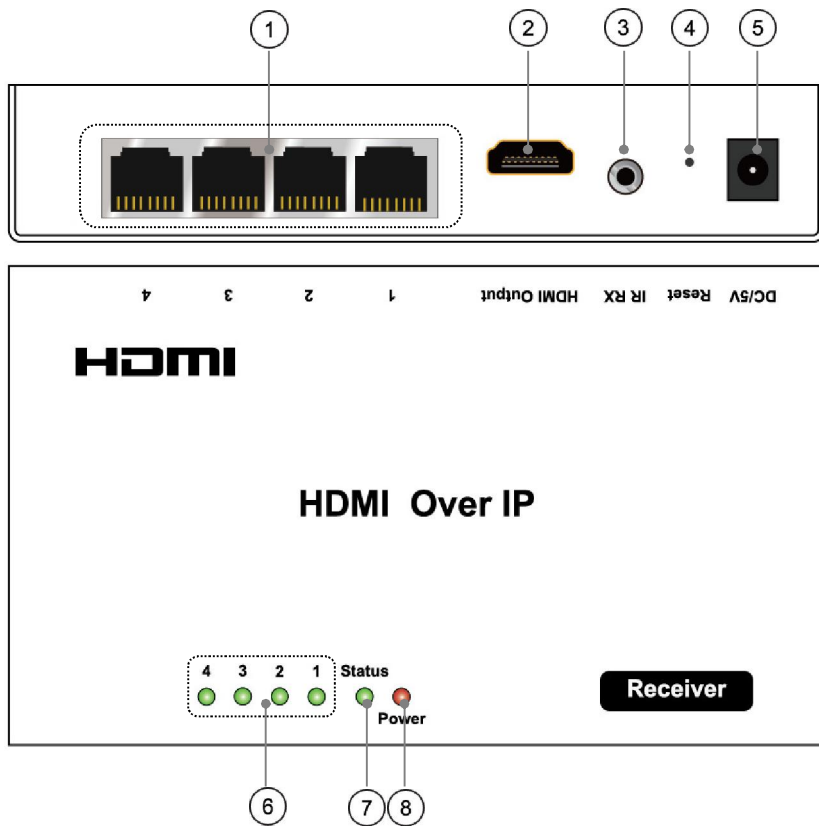

- | | | |
|--------------------------|--------------------------|---------------------------|
| Link ports | HDMI Output | IR-RX port |
| Reset button | Power input port | Status of Link connection |
| Status of device running | Indicator of power input | |

HDMI Over IP One source to more display function

1. Connect one HDMI Cable between the HDMI output port of source device and the HDMI input port of Transmitter unit
2. Connect one HDMI Cable between the HDMI input port of display and the HDMI output port of Receiver unit.
3. Connect one UTP Cat5e or better cables between the RJ45 port of Transmitter unit and RJ45 port of Receiver unit.
4. Connect the included 5V DC power supplies to both Transmitter unit and Receiver unit.
5. Power on the output device first and the source second.

1) One to more(A)

